

1007815.1



Please read all instructions carefully before use and retain for future reference.
Veuillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.
Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.
Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.
Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



Flammable material.
Matière inflammable
Entzündliches Material
Material inflamable
Materiale infiammabile



Materials approved for food use.
Matériaux approuvés pour un usage alimentaire.
Materialien sind für Lebensmittel zugelassen.
Materiales aprobados para uso alimentario.
Materiali approvati per uso alimentare.



CAUTION Sharp edges.
ATTENTION Bords tranchants.
VORSICHT Scharfe Kanten.
PRECAUCIÓN Bordes filosos.
AVVERTENZA Bordi affilati.



EN

GENERAL SAFETY This product is not a toy and is not suitable for children. Children should be supervised at all times around this set.

This product may contain sharp, bladed or pointed objects and small parts and components which pose a laceration or choking hazard to children and animals. Keep these parts clear from children and pets.

WARNING! Knives and utensils contain sharp edges which pose a serious risk of injury if used incorrectly. Knives and utensils are not to be used by persons under the age of 18.

The Stainless Steel cutlery is sharp and should always be handled with extreme care and caution. Use the handles at all times.

Supervision should be given and due care taken when using any sharp implements around children, pets and vulnerable adults. Always store out of reach.

Never run with a knife, or handle more than one knife at a time. Grasp each item firmly by the handle at all times. Never leave knives or sharp objects unattended whilst in use or loose on any surface.

Never attempt to catch a falling knife or sharp object.

BEFORE FIRST USE Before using for the first time, remove all packaging, stickers and labels from the product and retain for future reference or store for future use.

WARNING! Keep the Product away from heat sources such as BBQs and pit fires.
Ensure all straps are secured before attempting to carry.

WARNING! The item is not suitable for carrying hot foods or drinks unless suitably contained within an insulating flask or container.

Do not use any broken or damaged items. Serious risk of accident or injury is present when using defective items.

CLEANING & MAINTENANCE

Hand-wash all cutlery and tableware items thoroughly in warm water with a mild detergent and dry thoroughly immediately afterwards. Do not leave to air-dry.

CAUTION: Do not use harsh or abrasive chemical cleaners or detergents with your cutlery and tableware items as these may cause damage or deteriorate the quality. Use of metal scouring pads or similar is not recommended as these may damage the finish.

Picnic Blankets and Cotton Napkins (if applicable) should only be washed by hand.

PICNIC BLANKET CLEANING & MAINTENANCE

In the event of any spillages, blot the area immediately with paper towel to prevent staining.

DO NOT rub the stain as you may spread it or press it deeper into the fabric.

To wash the Picnic Blanket after use, we advise you dampen the fleece surface with a soft cloth and remove stain with a mild fabric washing detergent. Use a dabbing technique being careful not to rub the surface of the material too vigorously.

NOTE: Avoid using abrasive cleaners or scourers as they will harm the fleece material.

Once cleaned to your satisfaction, hang up to air dry to prevent pilling.

TIP: Once the Fleece Blanket is completely dry, roll tightly and place a scented dryer sheet inside. This will keep the Blanket fresh whilst being stored.

STAINS Liquids: Water and other liquids stain easily and leaving marks that are very difficult to remove. If you spill liquid, soak it up with a dry cloth. Avoid rubbing or putting too much pressure on the area affected, as this can actually push the stain into the fabric and damage the weave: blot the area lightly to remove the liquid. Leaving the fabric wet can cause it to mark. Use a dry cloth to dry the affected area quickly. Please note, that even with continual care, your fabric product will develop character over time.



EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to www.vonshef.com/warranty. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk

VonShef is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands. Unit 30, Stakehill Industrial Estate, Middleton, Manchester M24 2RW. EU Representative - DOMU Brands B.V Hofplein 20, 3032 AC, Rotterdam.