

# 1500090



Please read all instructions carefully before use and retain for future reference.

Veuillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.

Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.

Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.

Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



Materials approved for food use.

Matériaux approuvés pour un usage alimentaire.

Materialien sind für Lebensmittel zugelassen.

Materiales aprobados para uso alimentario.

Materiali approvati per uso alimentare.



 
Not dishwasher safe.

Ne va pas au lave-vaisselle.

Nicht spülmaschinenfest.

No apto para lavavajillas.

Non lavabile in lavastoviglie.



Not suitable for microwave use.

Ne peut pas être utilisé au four à microondes.

Nicht für die Mikrowelle geeignet.

No apto para uso en microondas.

Non adatto per microonde.

Refer to the symbols displayed below to ensure suitability for your hob.

**IMPORTANT** Always dry the base of your cookware before cooking.

**IMPORTANT** Always match the base to the hob or heat zone. Gas flames must always be confined to the base area and never allowed to extend up and around the sides of your Cookware. Take care to centre your cookware to get the most from your hob.



 
Electric Hob

Plaque électrique

Elektroherd

Placa eléctrica

Piano elettrico



Induction

Induction

Induktion

Inducción

Induzione



Gas

Gaz

Gas

Gas

Gas



Ceramic

Céramique

Keramik

Cerámica

Ceramica



Halogen

Halogène

Halogen

Halógeno

Alogeno



Please read all instructions carefully before use and retain for future reference.

#### **INTENDED USE**

Only use the Cookware for its intended purpose and within the parameters specified in this manual.

This Cookware is for domestic use only. Do not use outdoors or on wet surfaces.

The Cookware is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

#### **BEFORE FIRST USE**

Before using your Cookware for the first time, remove all packaging, stickers and labels from the product and store or dispose of safely.

Wash the Cookware thoroughly in warm, clean, soapy water with a soft cloth and mild detergent. Dry thoroughly using a clean, dry cloth or paper towel. Never allow the Cookware to air-dry naturally as this can tarnish the surface.

#### **GENERAL SAFETY**

The Cookware is not suitable for use in a dishwasher. The Cookware is not suitable for use in microwave ovens. The Cookware is not suitable for deep or shallow frying.

Never handle with bare hands. Use a suitable heat-resistant oven glove, grasping firmly by the handle(s) where applicable.

Never subject to sudden temperature changes as this may cause damage to the product.

Never use sharp or metal utensils, knives or implements with your Cookware. To protect the product, we recommend using silicone, heat-resistant plastic or wooden tools.

Sharp knocks, impact or dropping your cookware can cause damage. Do not use damaged items.

Do not fill the Cookware to more than 2/3 the capacity.

#### **CLEANING & MAINTENANCE**

Always wash after each use.

Wash in warm, clean, soapy water with a mild detergent and soft sponge. Dry thoroughly afterwards.

Never use to store food. Residue, salts, sugars and acids released by food can damage the Cookware.

Always allow your Cookware to cool fully before attempting any cleaning or storage.

Do not immerse in, or fill with, cold water when hot.

Do not use any metal, harsh abrasive or very stiff pads/washing up brushes, or abrasive cleaning agents on any of the surfaces.

Stubborn stains can be removed using a suitable non-metallic scouring pad.

Salt spots, tarnishing and stains can be removed using mild detergents specially formulated for cleaning Cookware and similar items.

Wash thoroughly after use of such products.

It is recommended that you place a paper towel between Cookware if stacking to prevent damage to the surfaces.



**DISPOSAL INFORMATION** Please recycle where facilities exist. Check with your local authority for recycling advice.

**CUSTOMER SERVICE** If you are having difficulty using this product and require support, please contact [support@domu.co.uk](mailto:support@domu.co.uk)

**WARRANTY** To register your product and find out if you qualify for a free extended warranty please go to [www.vonshef.com/warranty](http://www.vonshef.com/warranty).

Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

**COPYRIGHT** All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

## **THANK YOU**

Thank you for purchasing your product/appliance.

Should you require further assistance with your purchase, you can contact us at

[support@domu.co.uk](mailto:support@domu.co.uk)

VonShef is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands. M24 2RW.