

1500098



Please read all instructions carefully before use and retain for future reference.

Veillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.

Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.

Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.

Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



Materials approved for food use.

Matériaux approuvés pour un usage alimentaire.

Materialien sind für Lebensmittel zugelassen.

Materiales aprobados para uso alimentario.

Materiali approvati per uso alimentare.



Not suitable for microwave use.

Ne peut pas être utilisé au four à microondes.

Nicht für die Mikrowelle geeignet.

No apto para uso en microondas.

Non adatto per microonde.



Not dishwasher safe.

Ne va pas au lave-vaisselle.

Nicht spülmaschinenfest.

No apto para lavavajillas.

Non lavabile in lavastoviglie.



CAUTION Do not immerse in water.

ATTENTION Ne pas immerger dans l'eau.

VORSICHT Nicht in Wasser tauchen.

PRECAUCIÓN No sumergid en agua.

AVVERTENZA Non immergere nell'acqua.



EN

Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only use the Kitchenware for its intended purpose and within the parameters specified in this manual.

This Kitchenware is for domestic use only. Do not use outdoors or on wet surfaces.

The Kitchenware is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

BEFORE FIRST USE Before using your Kitchenware for the first time, remove all packaging, stickers and labels from the product and store or dispose of safely.

Wash thoroughly in warm, clean, soapy water with a soft cloth and mild detergent. Dry thoroughly using a clean, dry cloth or paper towel.

Never insert the Handles into the oven. Always remove from the Pizza Stone before cooking.

GENERAL SAFETY The Kitchenware is not suitable for use in a dishwasher.

The Kitchenware is not suitable for use in microwaves or ovens.

Do not subject Kitchenware to sudden temperature changes as this will cause damage.

Sharp knocks, impact or dropping your Kitchenware can cause damage.

Do not use damaged Kitchenware.

Exercise caution when using the Pizza Slicer. Hold the Slicer with the cutting blade away from yourself. Only use the Slicer as part of this Pizza Stone set. Improper use of the Pizza Slicer may result in injury.

CAUTION: Cutting blades contain sharp edges which pose a serious risk of injury if used incorrectly. The Pizza Slicer is not to be used by persons under the age of 18.

Do not place a hot Pizza Stone directly onto other surfaces. Always use the Handles and a suitable heat-resistant mat.

Always use suitable heat-resistant oven gloves when handling the Pizza Stone set as it will become extremely hot during use.

USAGE

Before first use, clean the Pizza Stone set with a clean, damp cloth. Dry thoroughly.

Remove the Handles and place your Pizza Stone in an oven. Preheat for several minutes.

IMPORTANT: Always place your Pizza Stone in a cold oven on a low rack **BEFORE** turning the oven on to preheat. The purpose of this is to allow the Stone to absorb the heat evenly. Allow approximately 10 minutes for preheating. **Exposing a cold Pizza Stone to a hot oven can cause the Stone to crack.**

Once the Pizza Stone has reached the required temperature, remove it from the oven using suitable heat-resistant oven gloves. Generously dust the Pizza Stone with cornflour, semolina or flour to avoid sticking, then transfer your pizza onto it from a pizza Stone or baking tray.

Adjust the temperature of the oven accordingly and cook the pizza for about 10 minutes, after which time you should check the pizza every few minutes until cooked. Ovens will differ so cooking times will vary; generally speaking, a thin crust pizza cooks in **10 to 12 minutes** on a Pizza Stone, a thicker crust in **12 to 15 minutes**. Once the cheese in the middle of the pizza melts and the crust turns golden brown, use an oven glove to remove the Pizza Stone from the oven. Place onto a suitable heat-resistant mat and allow to cool.

Once cooled, slice using the **PIZZA CUTTER** supplied.

Always allow the Pizza Stone to cool completely before cleaning.

CLEANING & MAINTENANCE

Do not immerse the Pizza Stone in water as this will damage the surface.

Always wash after each use to minimise food stains.

The Pizza Stone is prone to staining when exposed to acidic and oily foods. Wash in warm, clean, soapy water with a mild detergent and soft sponge.

Do not use scented detergents as they can leave residue that can transfer onto food.

Do not use any metal, harsh abrasive or very stiff cleaning pads/washing up brushes, or abrasive cleaning agents on any of the surfaces.

Stubborn stains can be removed by leaving the cookware to soak in warm water and scrubbing gently using a suitable non-abrasive scouring pad.

Rinse well with warm water to remove any soap residue and dry thoroughly with a clean cloth to prevent water stains from forming on the granite.

Store in a cool, dry area out of reach of children.



EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to www.vonshef.com/warranty. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk

VonShef is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands. M24 2RW.