

1500101



Please read all instructions carefully before use and retain for future reference.

Veuillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.

Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.

Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.

Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



Materials approved for food use.

Matériaux approuvés pour un usage alimentaire.

Materialien sind für Lebensmittel zugelassen.

Materiales aprobados para uso alimentario.

Materiali approvati per uso alimentare.



Not suitable for Microwave use.

Ne convient pas pour l'utilisation de micro-ondes.

Nicht für den Mikrowellenbetrieb geeignet.

No apto para uso en microondas.

Non adatto per l'uso a microonde.



Not dishwasher safe.

Ne va pas au lave-vaisselle.

Nicht spülmaschinenfest.

No apto para lavavajillas.

Non lavabile in lavastoviglie.

Refer to the symbols displayed below to ensure suitability for your hob.

IMPORTANT Always dry the base of your cookware before cooking.

IMPORTANT Always match the base to the hob or heat zone. Gas flames must always be confined to the base area and never allowed to extend up and around the sides of your Cookware. Take care to centre your cookware to get the most from your hob.



 
Electric Hob

Plaque électrique

Elektroherd

Placa eléctrica

Piano elettrico



Induction

Induction

Induktion

Inducción

Induzione



Gas

Gaz

Gas

Gas

Gas



Ceramic

Céramique

Keramik

Cerámica

Ceramica



Halogen

Halogène

Halogen

Halógeno

Alogeno



Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only use the Cookware for its intended purpose and within the parameters specified in this manual.

This Cookware is for domestic use only. **Do not use outdoors or on wet surfaces.**

Please take care when using this item and seek supervision if required.

BEFORE FIRST USE Before using your Cookware for the first time, remove all packaging, stickers and labels from the product and store or dispose of safely.

Wash the Cookware thoroughly in warm water with a soft cloth and mild detergent.

Dry thoroughly using a clean, dry cloth or paper towel. Never allow the Cookware to air-dry naturally as this can tarnish the surface.

Spread a thin layer of melted shortening or vegetable oil over the skillet. Place the cookware on the middle rack of your oven at **180°C/356°F** and allow to bake for an hour. Remove the cast iron from the oven and allow to cool naturally. Once cool, wipe away any excess oil left behind.

Alternatively, you can heat via a hob. Heat on medium heat, turn off the heat allow to cool, wipe access and repeat at least 5 times before first use.

GENERAL SAFETY The Cookware is not suitable for use in a dishwasher.

The Cookware is not suitable for use in microwave ovens.

The Cookware is suitable for oven temperatures of up to **240°C/464°F** unless otherwise stated in the listings or on the product itself.

Place on a suitable rack in the middle of the oven.

Never handle with bare hands. Use a suitable heat-resistant oven glove, grasping firmly by the handle(s) where applicable.

Never subject to sudden temperature changes as this may cause damage to the product.

Never use sharp or metal utensils, knives or implements with your Cookware. To protect the product, we recommend using silicone, heat-resistant plastic or wooden tools.

Sharp knocks, impact or dropping your cast iron ovenware can cause damage. Do not use damaged items.

CLEANING & MAINTENANCE Always allow the Cookware to cool fully before attempting any cleaning or storage.

Always wash after each use. Wash in warm water with a soft sponge, wipe clean any food residue and reseason the pan to help build the non stick properties. Pre-season with a spoonful of oil. The item can also be placed on a low heated hob to dry. Never allow the item to air-dry as this can cause spot to appear.

For any stubborn food residue, simmer a small amount of water for **3-5 minutes** then allow to cool. Once cool enough, Use a wooden or silicone spatula to scrape any residual food from the surface of the Cookware.

Never use to store food. Residue, salts, sugars and acids released by food can damage the Cookware.

If there is any food baked onto the cookware, sprinkle a generous amount of salt onto the surface and use a paper towel to scour away any build-up.

Use a damp cloth to remove and salt and re-season the cookware with a spoonful of cooking oil.

Do not immerse in, or fill with, cold water when hot.

Do not use any metal, harsh abrasive or very stiff pads/ washing up brushes, or abrasive cleaning agents on any of the surfaces.

It is recommended that you place a paper towel between Cookware if stacking to prevent damage to the surfaces.



DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact **support@domu.co.uk**

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to **www.vonshef.com/warranty**. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance.

Should you require further assistance with your purchase, you can contact us at

support@domu.co.uk

VonShef is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands. M24 2RW.