

1507176

1507177



Please read all instructions carefully before use and retain for future reference.

Veuillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.

Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.

Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.

Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



Materials approved for food use.

Matériaux approuvés pour un usage alimentaire.

Materialien sind für Lebensmittel zugelassen.

Materiales aprobados para uso alimentario.

Materiali approvati per uso alimentare.



Not suitable for microwave use.

Ne peut pas être utilisé au four à microondes.

Nicht für die Mikrowelle geeignet.

No apto para uso en microondas.

Non adatto per microonde.



Tabletop use only.

Utilisation sur table uniquement

Nur Tischnutzung

Solo uso de sobremesa

Solo uso da tavolo



Not dishwasher safe.

Ne va pas au lave-vaisselle.

Nicht spülmaschinenfest.

No apto para lavavajillas.

Non lavabile in lavastoviglie.



Not suitable for freezer use.

Ne convient pas pour une utilisation en congélateur.

Nicht für die Tiefkühlung geeignet.

No apto para uso en el congelador.

Non adatto per l'uso in congelatore.



EN

Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only operate this item for its intended purpose and within the parameters specified in this manual.

This Air Flask is not intended for use in commercial or industrial environments.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

This appliance is not intended for use by children.

GENERAL PRECAUTIONS.

When using containers with hot liquids, basic precautions should always be followed, including the following:

Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the Air Flask.

If the Air Flask is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services.

Do not use the Air Flask if any parts appear to be faulty, missing or damaged.
Ensure all parts are securely attached before use.

APPROPRIATE USE.

Do not exceed maximum capacity. Boiling water may be ejected if the Air Flask is overfilled.

In order to minimise bacterial growth, do not use the Air Flask to keep warm milk products or baby food.

Do not use to store carbonated drinks.

Do not use for storing or carrying ice cubes unless equipped with a plastic insert (not supplied). Transportation of ice cubes may cause damage to the inner liner.

Only use the Air Flask with the attachments provided.

The Air Flask is only to be installed in locations where it can be overseen by people familiar with its use.

Always locate the Air Flask away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides.

Always stand the Air Flask in an upright position.

The product is designed to be used on table tops/counter surfaces. Be aware that, if tilted, contents will still come out of the Flow Pipe, even if the Lid is closed. Keep upright when loaded. Steam and condensation may be created during the pumping process. Do not position the Air Flask under units or in confined spaces.

Always position the Air Flask in such a way that the Pump Button cannot be accidentally operated by children.

Always ensure the Locking Lid is correctly fitted before carrying hot liquids.

Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.

Do not insert any objects into openings or cover the unit.

When using for the first time, your Air Flask may give off a 'new' smell or vapour. This will dissipate after a few uses. Do not touch the surface of the Air Flask as it will become very hot.

Always take care when dispensing hot liquids.

CAUTION: Keep all body parts away from the outlet when dispensing.

Do not leave the Air Flask unattended when in use.

When not in use, always slide the Safety Lock Switch to the 'closed' position.

 
Always allow the Air Flask to cool completely before cleaning.

The Storage Tank should always be cleaned after every use.

Do not lubricate any parts or carry out any maintenance or repair work other than that shown

in this manual, or as advised by the DOMU Brands Customer Care Helpline.

Use only as described in this manual and with DOMU Brands recommended attachments only.

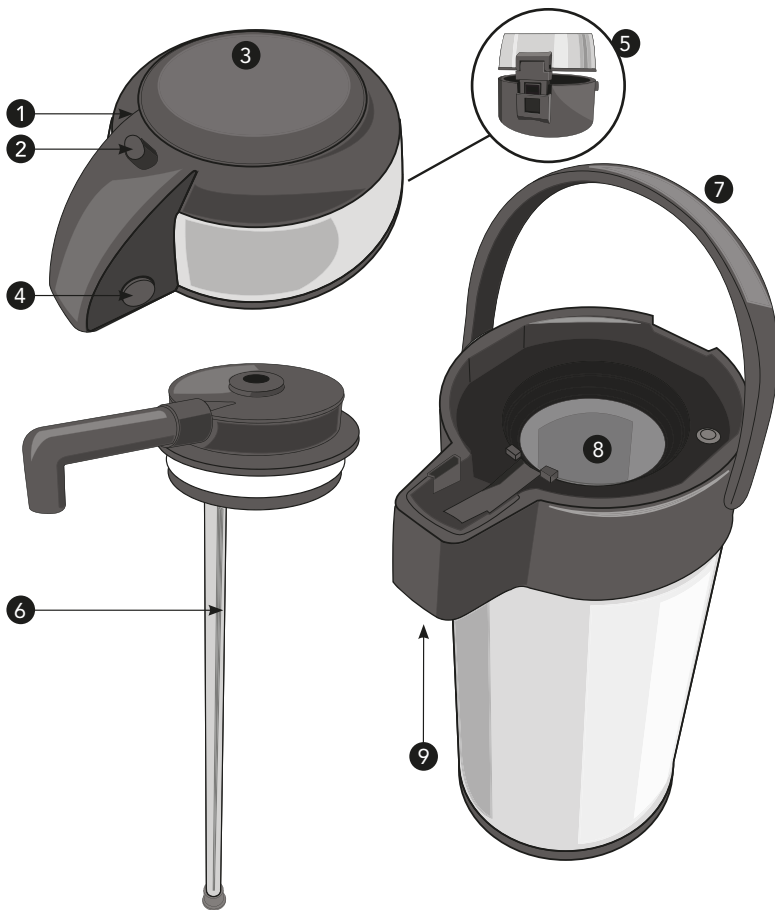

1. LID.

2. SAFETY LOCK SWITCH.

3. PUMP BUTTON.

4. LID RELEASE BUTTONS.

5. REMOVAL TAB.

6. FLOW PIPE.


7. CARRY HANDLE.


8. STORAGE TANK.

9. OUTLET.

Before using this appliance for the first time, please ensure you complete the following steps:

- Carefully unpack the Air Flask and remove all packaging materials, including any stickers or labels.
- Place the Air Flask on a dry, level, heat-resistant surface, away from the edge of a worktop.


 **WARNING!** Steam and condensation may be created during the pumping process. Do not position the Air Flask under units or in confined spaces.

 **WARNING!** Always position the Air Flask in such a way that the **PUMP BUTTON** cannot be accidentally operated by children.

- Wipe down the exterior using a slightly damp cloth.
- Squeeze the 2 **LID RELEASE BUTTONS** to open the **LID** and fill the **STORAGE TANK** to the rim with warm water and mild detergent. Close the **LID** and firmly press down to lock into position.

CAUTION: Do not exceed maximum capacity as this will cause the **STORAGE TANK** to overflow.

- Before first use, dispense and discard the cleaning solution in order to remove any residue that may remain from the manufacturing process. Repeat with cold water only to ensure that the Air Flask is properly flushed out and detergent-free before use.

 **WARNING!** Do not leave the Air Flask unattended during use.

- Once the **STORAGE TANK** has emptied and been suitably flushed out, you can then add your chosen beverage or smooth soups.

- Unlock the **LID** by squeezing the 2 **LID RELEASE BUTTONS**.
- Remove the **FLOW PIPE** from the centre.
- Carefully fill the **STORAGE TANK** with the desired amount of hot liquid and replace the **FLOW PIPE** before closing and locking the **LID**.

IMPORTANT: Do not fill with carbonated beverages or milk products.

CAUTION: Do not exceed maximum capacity. Hot liquids may be ejected if the Air Flask is overfilled.

CAUTION: Avoid underfilling the Air Flask as this will prevent any liquids from being dispensed. Ensure there is a minimum of **2 litres** of liquid added before operating the Air Flask.



 
CAUTION: Do not operate without a cup or container under the **OUTLET**. Always make sure that the cup or container is positioned correctly before dispensing.

- Push the **PUMP BUTTON** repeatedly and the contents will start to flow from the **OUTLET**.
- To stop the flow of liquids, simply release the **PUMP BUTTON**.

CAUTION: Do not open the **LID** immediately after the pumping process as hot steam may escape.

IMPORTANT: When you are not using the Air Flask, we strongly recommend securing the **PUMP BUTTON** by closing the **SAFETY SWITCH** to the 'closed' **POSITION** to prevent accidental dispensing.

- Allow the Air Flask to cool completely before handling, refilling or cleaning.

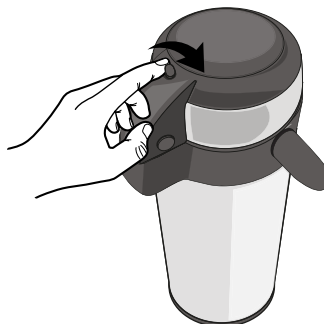

If your water has a high iron content, brownish stains may appear in the **STORAGE TANK**. These stains can be wiped away using a cloth and a mild abrasive. Rinse the Air Flask thoroughly with fresh water to remove any cleaning solution before use.

Take due care to follow the instructions in this manual carefully in order to better maintain your Air Flask and prevent discoloration.

Descaling should be done regularly, even in soft water areas.

- Limescale may be white, coloured, even rusty-looking.
- Phosphate scale is not generally visible, but is present even in soft water areas.

CAUTION: Before carrying out cleaning or maintenance, allow the Air Flask to cool completely.

- Dispense any remaining liquid and ensure the Air Flask has completely cooled.
- Remove the **LID** by pressing the **REMOVAL TAB** at the rear (shown below).
- Gently scrub the interior of the **LID** using a non-abrasive cleaning brush or sponge with warm water and mild detergent.

 
CAUTION: Do not use abrasive cleaning materials or detergents on the surface of the Air Flask as this may scratch or tarnish the stainless steel finish.

- Remove the **FLOW PIPE** from the centre and leave to soak in warm soapy water.

TIP: Fill the **STORAGE TANK** with warm soapy water and mild detergent. Insert the **FLOW PIPE** and replace the **LID**, ensuring it is locked into position. Press the **PUMP BUTTON** several times until the solution has been completely flushed through and discarded. Remove the **LID** and rinse the interior with clean water before drying all parts thoroughly.

CAUTION: The Air Flask is NOT dishwasher safe. Wash all parts by hand only.

NOTE: We recommend storing the Air Flask without the **LID** attached to minimise any mould or bacteria growth.

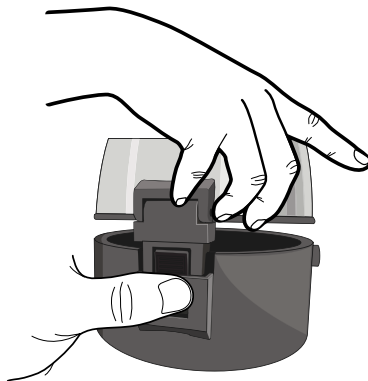

NOTE: To take the **LID** off the unit, firmly press the **REMOVAL TAB** at the rear of the **LID**. Pull the **LID** up to detach.



EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to www.vonshef.co.uk/warranty. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

FR

INFORMATIONS RELATIVES AU RECYCLAGE

Veillez recycler là où il existe des installations adéquates. Vérifiez auprès de vos autorités locales pour obtenir des conseils sur le recyclage.

SERVICE CLIENT Si vous rencontrez des difficultés pour utiliser ce produit et avez besoin d'assistance, veuillez contacter support@domu.co.uk

GARANTIE Pour enregistrer votre produit et découvrir si vous vous qualifiez pour une extension gratuite de garantie, rendez-vous sur www.vonshef.co.uk/warranty. Conservez une preuve d'achat, reçu ou attestation, pour prouver la date de l'achat. La garantie ne s'applique que si le produit a été utilisé de la manière indiquée dans la section de la page des avertissements de ce manuel et que toutes les instructions ont été suivies de manière précise. Tous les abus réalisés sur le produit, dans la manière dont il a été utilisé, rendront la garantie caduque. Les marchandises renvoyées ne seront acceptées que si elles sont remballées dans leur emballage d'origine et accompagnées d'un formulaire de retour adéquat et rempli. Ceci n'affecte pas vos droits statutaires. Cette garantie n'accorde aucun droit à une personne obtenant le produit de seconde main ou à des fins d'utilisation commerciale ou communale.

DROITS D'AUTEUR Toutes les informations de ce manuel d'utilisation sont protégées par droit d'auteur par DOMU Brands. Toute utilisation non autorisée pourrait enfreindre les lois mondiales de droit d'auteur, de marque déposée ainsi que d'autres lois

DE

ENTSORGUNG Bitte entsorgen Sie das Produkt an geeigneten Entsorgungsstellen. Fragen Sie bei Ihrer Gemeinde nach.

KUNDENSERVICE Wenn Sie Schwierigkeiten mit diesem Produkt haben und Unterstützung benötigen, wenden Sie sich bitte an support@domu.co.uk

GARANTIE Um Ihr Produkt zu registrieren und zu erfahren, ob eine kostenlose verlängerte Garantie möglich ist, gehen Sie bitte auf www.vonshef.co.uk/warranty. Bitte behalten Sie eine Rechnung oder den Kassenzettel als Nachweis des Einkaufsdatums auf. Die Garantie gilt nur, wenn das Produkt nur wie in dieser Anleitung beschrieben verwendet wurde und wenn alle Anweisungen befolgt wurden. Jeglicher Missbrauch des Produkts oder der Art und Weise, in der es verwendet wird, macht die Garantie ungültig. Zurückgegebene Artikel werden nur akzeptiert, wenn sie sich in der Originalverpackung befinden und wenn ein relevantes und vollständig ausgefülltes Rücksendeformular enthalten ist. Dies betrifft nicht Ihre gesetzlichen Ansprüche. Für Artikel, die gebraucht erworben wurden, oder die kommerzielle oder gemeinschaftlich genutzt werden, entstehen keinerlei Ansprüche auf Garantie.

COPYRIGHT Alle Materialien in dieser Anleitung stehen unter Copyright von DOMU Brands Ltd. Jede unautorisierte Verwendung kann das weltweite Copyright, die Handelsmarke und andere Gesetze verletzen.

ES

INFORMACION DE DESECHO Por favor, reciclad en las instalaciones correspondientes. Consultad con vuestra autoridad local para obtener consejos de reciclaje.

SERVICIO AL CLIENTE Si tiene dificultades para utilizar este producto y necesita asistencia, contacte con support@domu.co.uk

GARANTÍA Para registrar vuestro producto y averiguar si califica para una garantía extendida gratuita, vaya a www.vonshef.co.uk/warranty. Conservad un comprobante de recibo de compra o extracto como prueba de la fecha de compra. La garantía solo se aplica si el producto se utiliza únicamente de la manera indicada en la página de advertencias de este manual, y todas las demás instrucciones se han seguido con precisión. Cualquier abuso del producto o la manera en que se use invalidará la garantía. Los productos devueltos no se aceptarán a menos que se vuelvan a empaquetar en su embalaje original y acompañados por un formulario de devolución completo y pertinente. Esto no afecta sus derechos legales. No se otorgan derechos bajo esta garantía a una persona que adquiere el aparato de segunda mano o para uso comercial o comunitario

DERECHOS DE AUTOR Todo el material en este manual de instrucciones está protegido por DOMU Brands. Cualquier uso no autorizado puede violar los derechos de autor, marcas comerciales y otras leyes en todo el mundo.

IT

INFORMAZIONI SULLO SMALTIMENTO Si prega di riciclare nelle apposite strutture. Chiedere una consulenza alle autorità competenti per il riciclo.

SERVIZIO CLIENTI Se si riscontrano difficoltà nell'utilizzo di questo prodotto e si richiede supporto, contattare support@domu.co.uk

GARANZIA Per registrare il prodotto e capire se hai diritto all'estensione di garanzia, vai su www.vonshof.co.uk/warranty. Si prega di conservare la ricevuta del pagamento quale prova della data d'acquisto. La garanzia si applica solo se il prodotto viene utilizzato esclusivamente come indicato nella pagina delle Avvertenze del presente manuale e se tutte le altre informazioni vengano accuratamente seguite. Qualsiasi abuso nell'utilizzo di questo prodotto invaliderà la garanzia. I resi non saranno accettati se non riposti nella confezione originale ed accompagnati da un modulo di reso completo. Ciò non pregiudica i propri diritti obbligatori. La presente garanzia non attribuisce alcun diritto a coloro che acquistano prodotti di seconda mano o per fini commerciali o condivisi.

COPYRIGHT Tutto il materiale contenuto nel presente manuale delle istruzioni è protetto da copyright di DOMU Brands. Qualsiasi uso non autorizzato potrebbe violare il copyright a livello mondiale, marchio ed altre leggi.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk

VonShof is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands. M24 2RW.

MERCI

Merci d'avoir acheté notre produit/appareil. Si vous aviez besoin d'aide suite à votre achat, vous pouvez nous contacter a support@domu.co.uk
VonShof est une marque déposée de DOMU Brands Ltd. Fabriqué en Chine pour DOMU Brands. M24 2RW.

VIELEN DANK

Vielen Dank, dass Sie das Produkt/Gerät gekauft haben. Sollten Sie weitere Unterstützung benötigen, können Sie uns gerne unter (email) kontaktieren. support@domu.co.uk
VonShof ist eine registrierte Handelsmarke von DOMU Brands Ltd. Hergestellt in China für DOMU Brands. M24 2RW.

GRACIAS

Gracias por comprar vuestro producto/aparato. Si requiere asistencia con vuestra compra, podeis contactarnos a support@domu.co.uk

VonShof es una marca registrada de DOMU Brands Ltd. Hecha en China para DOMU Brands. M24 2RW.

GRAZIE

Grazie per aver acquistato il prodotto. Per ulteriore assistenza sul tuo acquisto, puoi contattarci all'indirizzo email support@domu.co.uk
VonShof è un marchio registrato di DOMU Brands Ltd. Made in Cina per DOMU Brands. M24 2RW.