

5PC MICROWAVE PLATE COVERS -

VonShef®

07/224 - CARE GUIDE

**PLEASE READ ALL INSTRUCTIONS CAREFULLY AND
RETAIN FOR FUTURE REFERENCE.**

BEFORE FIRST USE

Before using the Microwave Plate Covers for the first time, remove all packaging, stickers and labels from the product and retain for future reference or store for future use.

Hand-wash all items thoroughly in warm water with a mild detergent and dry thoroughly.

DO NOT use harsh or abrasive chemical cleaners or detergents to clean the Plate Covers as these may cause damage or deteriorate the quality. Use of metal scouring pads or similar is not recommended as these may also damage the finish.

CLEANING & AFTER USE

Thoroughly clean the Microwave Plate Covers after each use. Hand-washing is recommended. Alternatively, you can place the items on the top rack of a dishwasher if preferred. Dry all items thoroughly before storing.

You can sterilize the Microwave Plate Covers by pouring boiling water into them along with a mild detergent and leaving it for 2-4 minutes. Once the water has cooled, gently scrub using a soft sponge, then carefully discard the water. Rinse well with warm water.



IMPORTANT CARE & USE

NEVER place the Covers over food without opening the vents. Failure to do so may result in exhausted steam escaping when removing the Cover causing scalding injuries.

NEVER use any sharp or metal utensils, knives or other implements with your Microwave Plate Covers as these can scratch, cut or damage your items.

Certain foods with strong colours or flavours can cause staining to the Covers that can be difficult to remove. Clean the Covers immediately after use, following the above guidelines, to preserve the finish.

The Microwave Plate Covers are **NOT** designed for use with, or to be stored in, a freezer.

WARNING! The Plate Covers will become hot when used in a microwave. Exercise caution when handling - always use a suitable heat-resistant oven mitt.

The Plate Covers are heat-resistant to 200°C unless otherwise stated.

Exposing the Plate Covers to temperatures higher than this can cause permanent damage.

NEVER place the Plate Covers on a direct heat source such as hob, open flame or heating elements.

CUSTOMER SERVICES

If, for any reason, this product proves to be unsatisfactory, please contact hello@doum.co.uk or usasupport@domubrand.com

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

WARRANTY

To register your product and find out if you qualify for a free extended warranty, go to:

www.VonShef.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in this Care Guide and all instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring this product second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual are copyrighted by DOMU Brands Ltd.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank you for purchasing the 5pc Microwave Plate Covers.

VonShef® is a registered trademark of DOMU Brands Ltd
Made in China for DOMU Brands Ltd M24 2RW.