

2000165



Please read all instructions carefully before use and retain for future reference.

Veuillez lire attentivement ces instructions avant utilisation et conservez-les pour pouvoir les consulter à l'avenir.

Bitte lesen Sie die Anleitung sorgfältig und bewahren Sie sie als Referenz auf.

Leed todas las instrucciones detenidamente antes de usar y retened para futuras consultas.

Si prega di leggere attentamente tutte le istruzioni prima dell'uso e conservarle per una futura consultazione.



CAUTION hot surfaces

ATTENTION Surfaces chaudes

VORSICHT heiße Oberflächen

PRECAUCIÓN superficies calientes

AVVERTENZA Superfici calde



Materials approved for food use.

Matériaux approuvés pour un usage alimentaire.

Materialien sind für Lebensmittel zugelassen.

Materiales aprobados para uso alimentario.

Materiali approvati per uso alimentare.



CAUTION Do not immerse in water.

ATTENTION Ne pas immerger dans l'eau.

VORSICHT Nicht in Wasser tauchen.

PRECAUCIÓN No sumergid en agua.

AVVERTENZA Non immergere nell'acqua.



Do not cover.

Ne pas couvrir.

Nicht abdecken.

No cubrir.

Non coprire.



Ensure product is not damaged before first use
S'assurer que le produit n'est pas endommagé avant la première utilisation
Stellen Sie vor dem ersten Gebrauch sicher, dass das Produkt nicht beschädigt ist
Asegúrese de que el producto no esté dañado antes del primer uso
Assicurarsi che il prodotto non sia danneggiato prima del primo utilizzo



Do not overfill
Ne pas trop remplir
Nicht überfüllen
No llene demasiado
Non riempire eccessivamente



EN

Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only operate the appliance for its intended purpose and within the parameters specified in this manual.

This appliance is for domestic use only. Do not use outdoors or on wet surfaces.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

GENERAL SAFETY Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance.

If the appliance is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services. Do not use the appliance if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached as instructed by this instruction manual before use.

CABLES AND PLUGS Check to ensure your electricity supply matches that shown on the rating plate. This product should only be used as rated. Preferably, the socket outlet should be protected by a Residual Current Device RCD (UK/EU) Ground Fault Indicator (US).

Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorised service agent in order to avoid a hazard. The use of an extension cable is not recommended.

Do not handle the plug or appliance with wet hands. Keep the cable away from heated surfaces.

Do not let the cable hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets.

Do not pull the cable around sharp edges or corners. Do not leave unattended when plugged in. Unplug from outlet when not in use.

Turn off all controls before unplugging.

Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.

Always unplug before performing user maintenance, connecting or disconnecting attachments, or changing accessories.

Ensure the cable is stored safely to prevent hazards.

RISK OF PERSONAL INJURY Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides.

Do not insert any objects into openings or cover the appliance.

Do not use the appliance near any combustible surfaces.

Only use suitable cookware where applicable.

Do not use outdoors or near heat sources.

Take care not to touch any surfaces that may get hot when in use.

Take care not to touch any surfaces that may remain hot for a period of time after use.

Never operate the appliance when empty.

Do not overload/overflow the appliance.

When using for the first time your appliance may give off a 'new' smell or vapour. This will dissipate after a few uses.

Do not lift or move the appliance whilst in use.

Do not operate continuously for periods longer than those marked on the product or indicated in the instructions.

Ensure the appliance is switched off and unplugged before changing accessories or cleaning.

Use only as described in this manual and with DOMU Brands recommended attachments only.

CLEANING & MAINTENANCE Never soak or immerse electrical or heating components and or a component that has a plug attached.

Hand washing recommended; soak in warm soapy water and wipe down using a soft sponge. To remove stubborn stains, use a non abrasive cleaning brush.

Do not use abrasive, harsh cleaning solutions or metal scouring pads.

Never wash any electrical or heating components and or a component that has a plug attached in a dishwasher.


TECHNICAL SPECIFICATION

Rated Voltage 220-240V

Rated Power 800W

Rated Frequency 50/60Hz

COMPONENTS

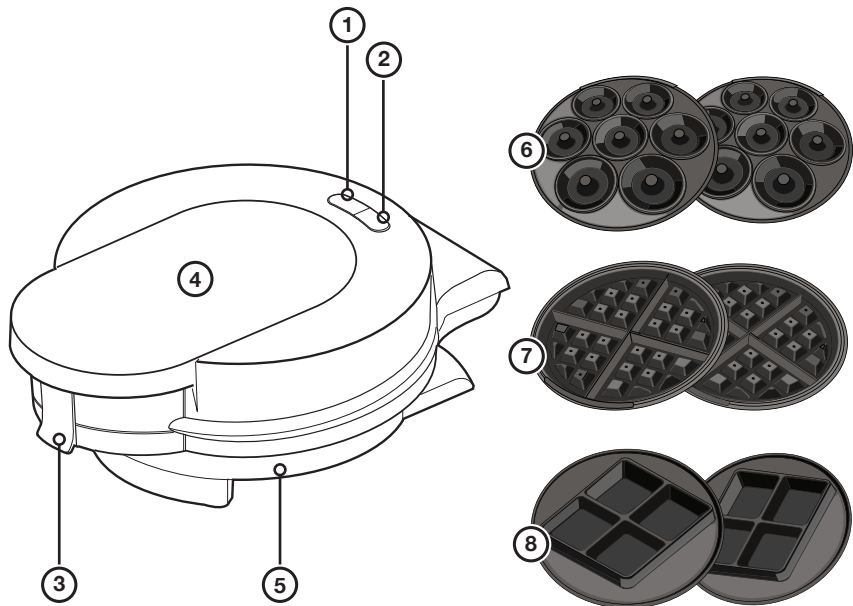

COMPONENT LIST

- 1 - Red Indicator Light/Power Light
- 2 - Green Indicator Light/ Ready Light
- 3 - Storage Locking Handle Clip
- 4 - Lid
- 5 - Base
- 6 - Doughnut Plates
- 7 - Waffle Maker Plates
- 8 - Brownie Plates

BEFORE FIRST USE

- Carefully unpack the 3 in 1 Snack Maker and remove all packaging materials including any stickers or labels.
- Clean the **PLATES** using a damp cloth or sponge and mild detergent. Wipe dry with a soft dry cloth.
- Clean the **MAIN UNIT** of the appliance with a damp cloth or sponge.



WARNING! Never immerse the **MAIN UNIT** in water or any other liquid.

- Position the Snack Maker on a dry, level and heat-resistant surface.

NOTE: When using the Snack Maker for the first time, it may emit slight smoke or odour whilst any production residue burns off. This is completely normal and should disappear after a few minutes. However, as it may affect the flavour of your first batch made, it is recommended that you pre-heat the appliance, switch off and allow to cool.

- For best results, lightly coat the **PLATES** with a little cooking oil or cooking spray.

FITTING & REMOVING PLATES

- Select your desired **PLATES** to be fitted.
- Align the lip on one side of the **PLATE** with the black hinges of the Snack Maker and firmly push down until it clicks into place.

IMPORTANT: Ensure BOTH **PLATES** are correctly fitted before switching on the appliance. DO NOT mix **PLATES**.

- To remove the **PLATES**, simply press the corresponding **PLATE RELEASE BUTTON** located next to the **HANDLE LOCKING CLIP** and the bottom section of the **MAIN UNIT**.



WARNING! Always allow the **PLATES** to completely cool before removing them from the **MAIN UNIT**.

OPERATION

Before connecting the appliance to a suitable mains outlet, grease the required upper and lower **PLATES** with a little oil or butter using a brush or spray.

With the **LID** closed, connect the plug into rated voltage and the cooking surface begins pre-heating. The red and green lamp will be illuminated at the same time.

Once the cooking surface has reached the preset temperature (usually it will take about 3~4 minutes), the **GREEN READY LIGHT** will not be illuminated and this food is ready for cooking.

Carefully open the **LID** using an oven mit to avoid contact with the hot surfaces.

Pour your pre-prepared mixture into each of the cooking zones of the lower mould.

CAUTION! Take care not to overfill the moulds as the mixture may overspill.

Carefully close the **LID** to begin cooking.

NOTE - If there is resistance closing the **LID**, **DO NOT force**. Leave to cool, clean up any mixture that has overspilled and continue using less mixture.

NOTE - The **POWER LIGHT** may cycle on and off during the cooking process. This is completely normal as the appliance is just maintaining its temperature.

TIP - Try to resist opening the **LID** to check on the progress of your food in the first minute or two of cooking. Lifting the **LID** too early could result in the mixture splitting or sticking.

Continue to cook until the desired browning level has been achieved. Usual cooking time is **5-6 minutes**.

Once cooked, carefully lift the **LID** open.

CAUTION! Take extra care when opening the **LID** as steam may escape which may result in scalding injuries. Ensure an oven mitt is worn to protect against hot surfaces.

Remove the food using a plastic or wooden spatula.

NOTE - Avoid using any metal utensils as these will damage the surfaces of the **PLATES**.

If you are intending to make batches, close the **LID** between to conserve heat.

Once finished, disconnect the Snack Maker from the mains and allow to completely cool before plate removal/cleaning.

CAUTION: Before carrying out cleaning or maintenance, disconnect the appliance from the mains.

- Remove the **PLATES** using the **PLATE RELEASE BUTTONS** and clean using a damp sponge with warm water and mild detergent.
- If necessary, leave the **PLATES** to soak in warm water for several minutes before scrubbing with a non-abrasive sponge or scouring brush to remove any baked on ingredients.

CAUTION: Do not use abrasive cleaners or scouring pads to clean the Snack Maker as these may damage the surfaces.

- Clean the **MAIN UNIT** with a soft, damp cloth or sponge.



WARNING! Do not immerse the Snack Maker or power cord in water or any other liquid to clean.

Dry the Snack Maker and **PLATES** thoroughly before storing in a cool dry place with the power cord loosely coiled.

CAUTION: Never store the Snack Maker when it is wet or hot.

TROUBLESHOOTING

PROBLEM	SOLUTION
FOOD IS BROWNING TOO QUICKLY.	<ul style="list-style-type: none">• The POWER LIGHT shows that the appliance is ready to use. Avoid leaving too much time before you fill the moulds.• After several batches are cooked, we recommend disconnecting the Waffle Maker and allowing it to completely cool before continuing with more batches.
MIXTURE IS OVERFLOWING.	<ul style="list-style-type: none">• Ensure each mould is filled no more than $\frac{3}{4}$ full with the mixture.
FOOD IS NOT COOKED EVENLY.	<ul style="list-style-type: none">• Ensure the lid is kept closed until you are ready to add the mixture.
THE APPLIANCE IS PRODUCING SMOKE.	<ul style="list-style-type: none">• Unplug the Snack Maker and allow to cool completely. Clean the BAKING PLATES thoroughly before attempting another batch.



DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to www.vonshef.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk

VonShef is a registered trademark of DOMU Brands Ltd.
Made in China for DOMU Brands. M24 2RW.