
vonhaus

ARUBA 4 SEATER SOFA

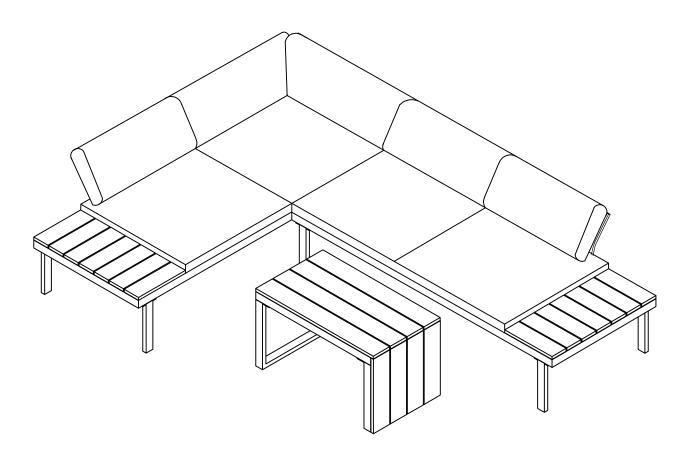

Setup Instructions

Product No. 2020001







Need further help? support@vonhaus.com

Besoin d'aide supplémentaire? support@vonhaus.com

Benötigen Sie weitere Hilfe? support@vonhaus.com

Necesita más ayuda? support@vonhaus.com

Hai bisogno di ulteriore assistenza? support@vonhaus.com

See our full range at www.vonhaus.com

Découvrez notre gamme complète sur www.vonhaus.com


Entdecken Sie unser gesamtes Sortiment auf www.vonhaus.com

Descubra toda nuestra gama en www.vonhaus.com


Scopri tutta la nostra gamma su www.vonhaus.com

² vonhaus


Components

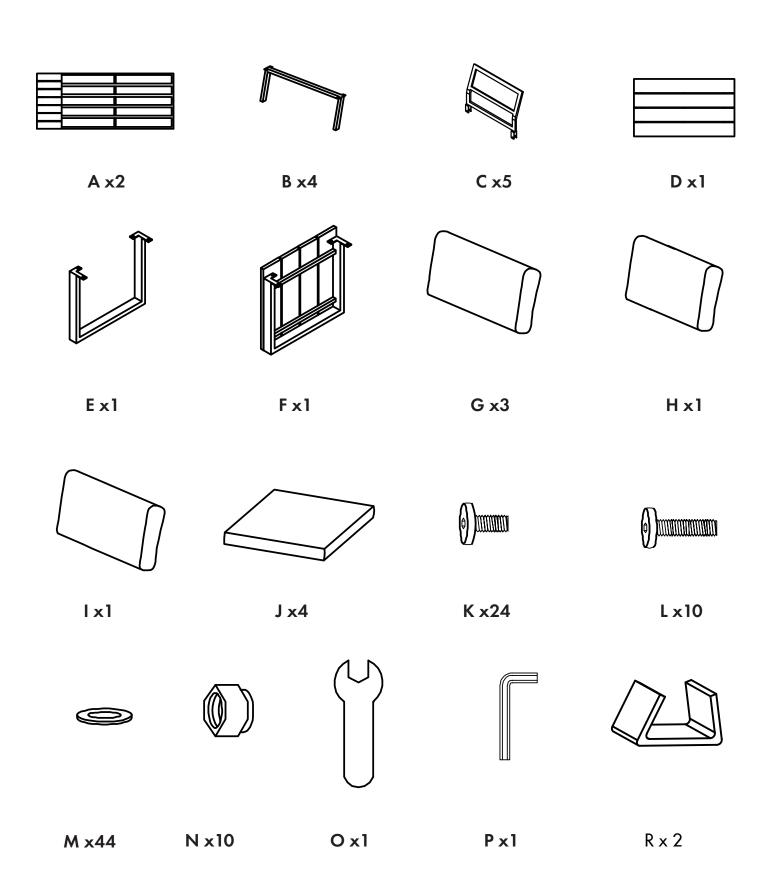





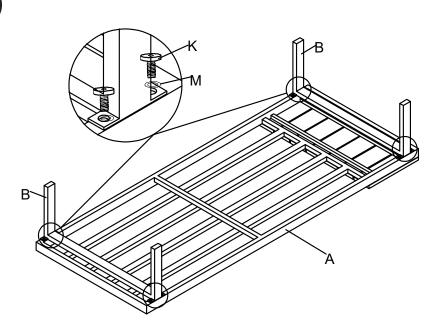




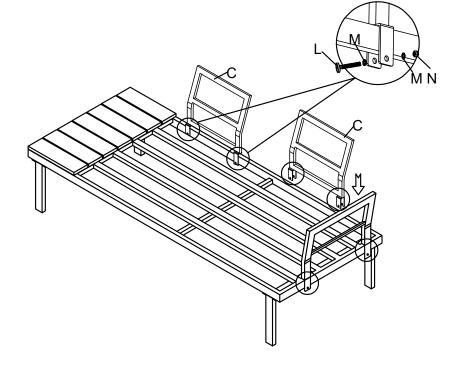


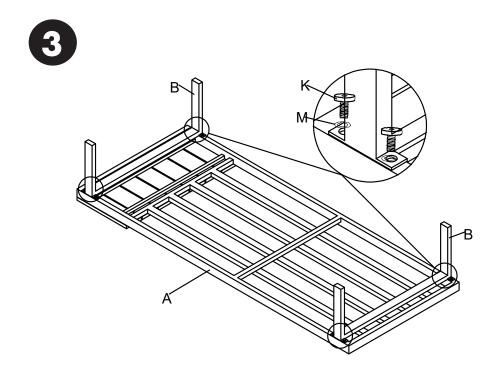

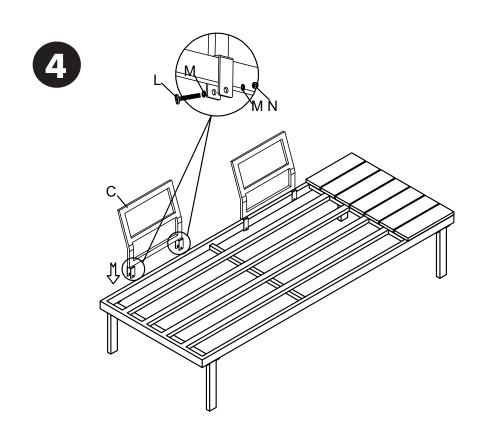


Assembly

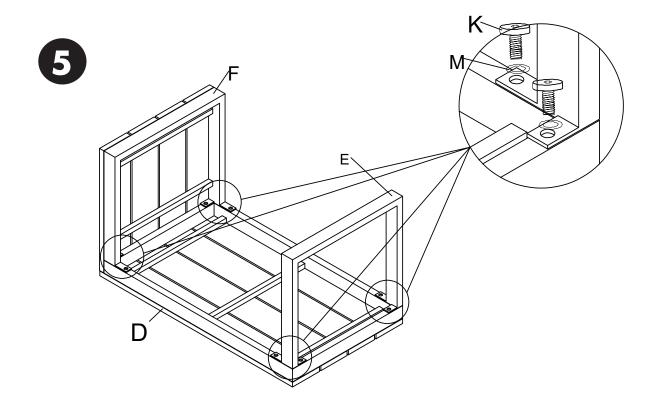

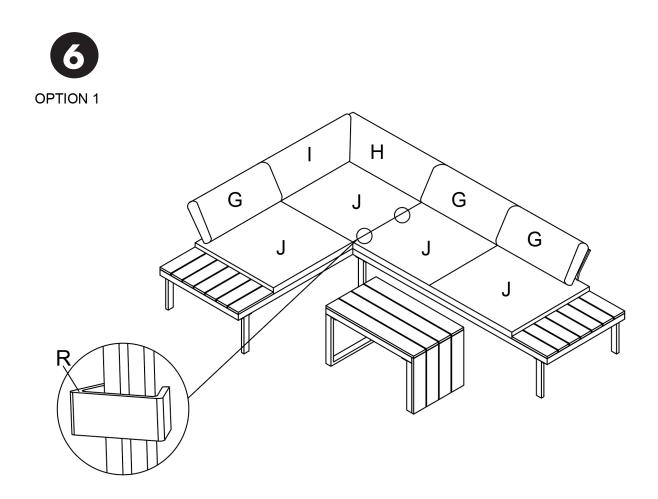


Assembly

FOR OPTIONS 2 & 3, CHANGE BACK REST POSITION AS PER THE BELOW.

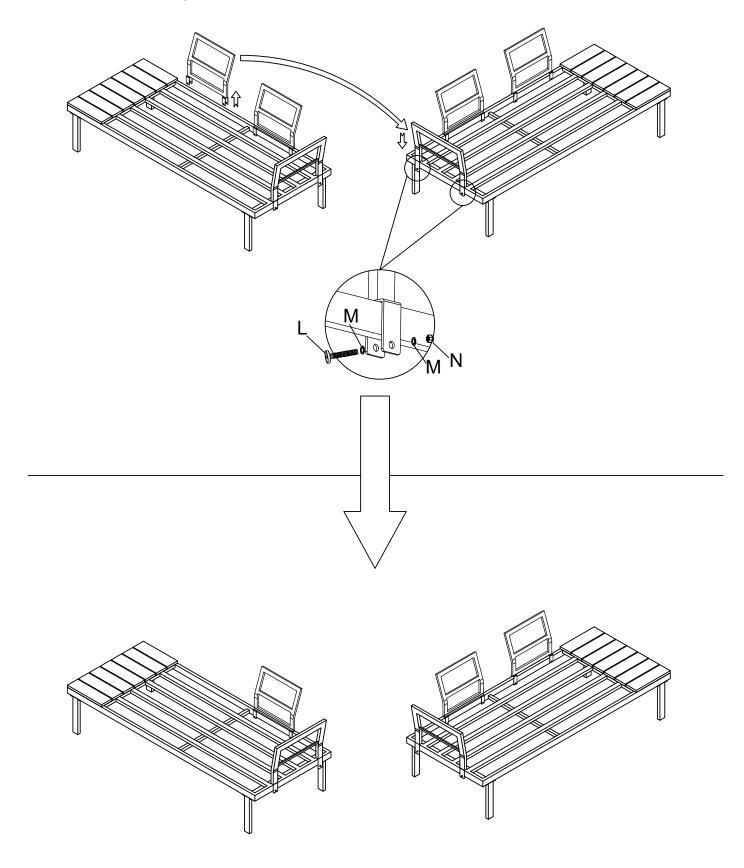

Assembly

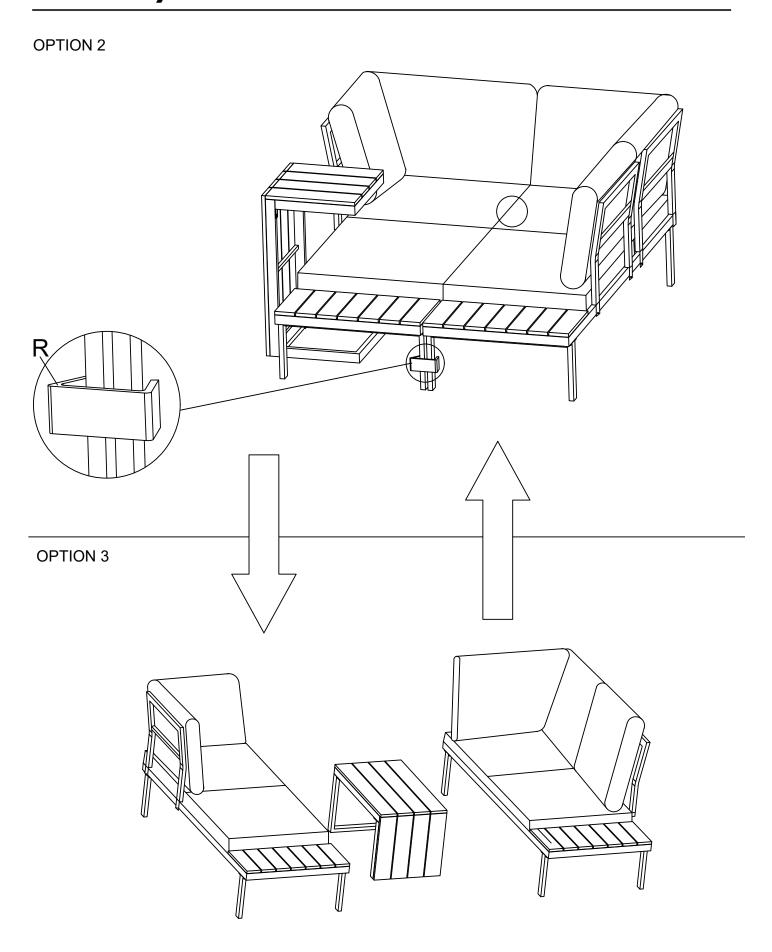

Information

Maintenance

- This product is intended for outdoor use only.
- Inspect the fabric for signs of wear and repair any small tears promptly.
- Remove and store fabric parts during the off-season to prolong their lifespan.
- Clean the fabric regularly with mild soap and water to remove dirt and stains.
- Avoid using harsh chemicals or bleach on the fabric to prevent damage.

Health & Safety

- Do not overload this furniture.
- Clean spills immediately to prevent stains.
- Avoid placing furniture on uneven surfaces to prevent tipping.
- Regularly inspect for mold or mildew and clean as needed.
- Ensure correct construction and installation to avoid risk of injury or damage to the product.

Troubleshooting

9

Why is my outdoor furniture fabric getting moldy?

Clean regularly and ensure the furniture is dry before covering.

Why are the cushions on my outdoor furniture flattening?

Fluff the cushions regularly and store them indoors when not in use.

Why is my outdoor furniture making noise?

Lubricate moving parts and tighten any loose components.

Why is my outdoor furniture frame bending? Avoid overloading the furniture and ensure it is placed on a level surface.

Why is my outdoor furniture wobbly? Tighten all screws and bolts and check for any structural damage.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@domu. co.uk

VonHaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands.

Authorised Representative

Authorised Representative Service 77 Camden Street Lower Dublin, D02 XE80, Ireland

Legal

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE

If you are having difficulty using this product and require support, please contact support@ vonhaus.com

WARRANTY

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

RETURNS

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.



Product No. 2020001