

2500449



Please read all instructions carefully before use and retain for future reference.



Do not use outdoors.



ATTENTION This appliance has a thermal cut out switch. The thermal cut out will activate and shut down the appliance should the appliance overheat.
Unplug from the mains and or battery and allow to cool for 60 minutes before re-use.



This product is only suitable for well insulated spaces or occasional use.



This product has a tip switch, if tipped/ knocked over the product will switch off.



CAUTION Do not immerse in water.



CAUTION hot surfaces



DANGER if swallowed.
Keep batteries out of reach of children. Swallowing may lead to serious injury or death due to internal burns.
If swallowed, go straight to the hospital. Dispose of used batteries immediately



Do not cover.

Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only operate the appliance for its intended purpose and within the parameters specified in this manual.

This appliance is for domestic use only. Do not use outdoors or on wet surfaces. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

GENERAL SAFETY Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance.

If the appliance is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services.

Do not use the appliance if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached as instructed by this instruction manual before use.

CABLES AND PLUGS Check to ensure your electricity supply matches that shown on the rating plate. This product should only be used as rated. Preferably, the socket outlet should be protected by a Residual Current Device

RCD (UK/EU) Ground Fault Indicator (US).

Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorised service agent in order to avoid a hazard. The use of an extension cable is not recommended. Do not handle the plug or appliance with wet hands.

Keep the cable away from heated surfaces.

Do not let the cable hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets.

Do not pull the cable around sharp edges or corners.

Do not leave unattended when plugged in. Unplug from outlet when not in use.

Turn off all controls before unplugging.

Do not unplug by pulling on the cable.

To unplug, grasp the plug, not the cable.

Always unplug before performing user maintenance, connecting or disconnecting attachments, or changing accessories.

Ensure the cable is stored safely to prevent hazards.

RISK OF PERSONAL INJURY Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides. Do not insert any objects into openings or cover the appliance.

Do not place any cardboard, plastics or paper inside or on the appliance unless stated in the instructions.

Do not use the appliance near any combustible surfaces. Do not use outdoors or near heat sources.

Take care not to touch any surfaces that may get hot when in use. Take care not to touch any surfaces that may remain hot for a period of time after use. Never operate the appliance when empty.

Do not overload/overfill the appliance. When using for the first time your appliance may give off a 'new' smell or vapour. This will dissipate after a few uses. Do not lift or move the appliance whilst in use.

Do not operate continuously for periods longer than those marked on the product or indicated in the instructions. Ensure the appliance is switched off and unplugged before changing accessories or cleaning.

Use only as described in this manual and with DOMU Brands recommended attachments only.

BATTERY WARNINGS

KEEP OUT OF REACH OF CHILDREN. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

Keep batteries out of the reach of children.

Do not allow children to replace batteries without adult supervision.

Do not short-circuit batteries.

Do not heat batteries.

Remove batteries from equipment if it is not to be used for an extended period of time, unless it is for emergency purposes.

Always select the correct size and type of battery most suitable for the intended use.

Information provided with the equipment to assist correct battery

selection should be retained for reference. Clean the battery contacts and also those of the equipment prior to battery installation.

Ensure that the batteries are installed correctly with regard to polarity (+ and -). Remove exhausted batteries promptly.

Do not dismantle batteries.

Do not dispose of batteries in fire except under conditions of approved and controlled incineration.

Batteries may be disposed of via communal refuse arrangements provided no local rules to the contrary exist.

Do not recharge non-rechargeable batteries.

Do not expose cells to heat or fire. Avoid storage in direct sunlight.

Do not remove a cell from its original packaging until required for use.

Do not subject cells to mechanical shock. In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Do not use any cell which is not designed for use with the equipment.

Do not mix cells of different manufacture, capacity, size or type within a device.

Keep cells clean and dry.

Wipe the cell terminals with a clean dry cloth if they become dirty.

Retain the original product literature for future reference.

Use only the cell in the application for which it was intended.


TECHNICAL SPECIFICATION

Rated Voltage 220V-240V ~

Rated Power: 2500W

Rated Frequency 50Hz


COMPONENTS

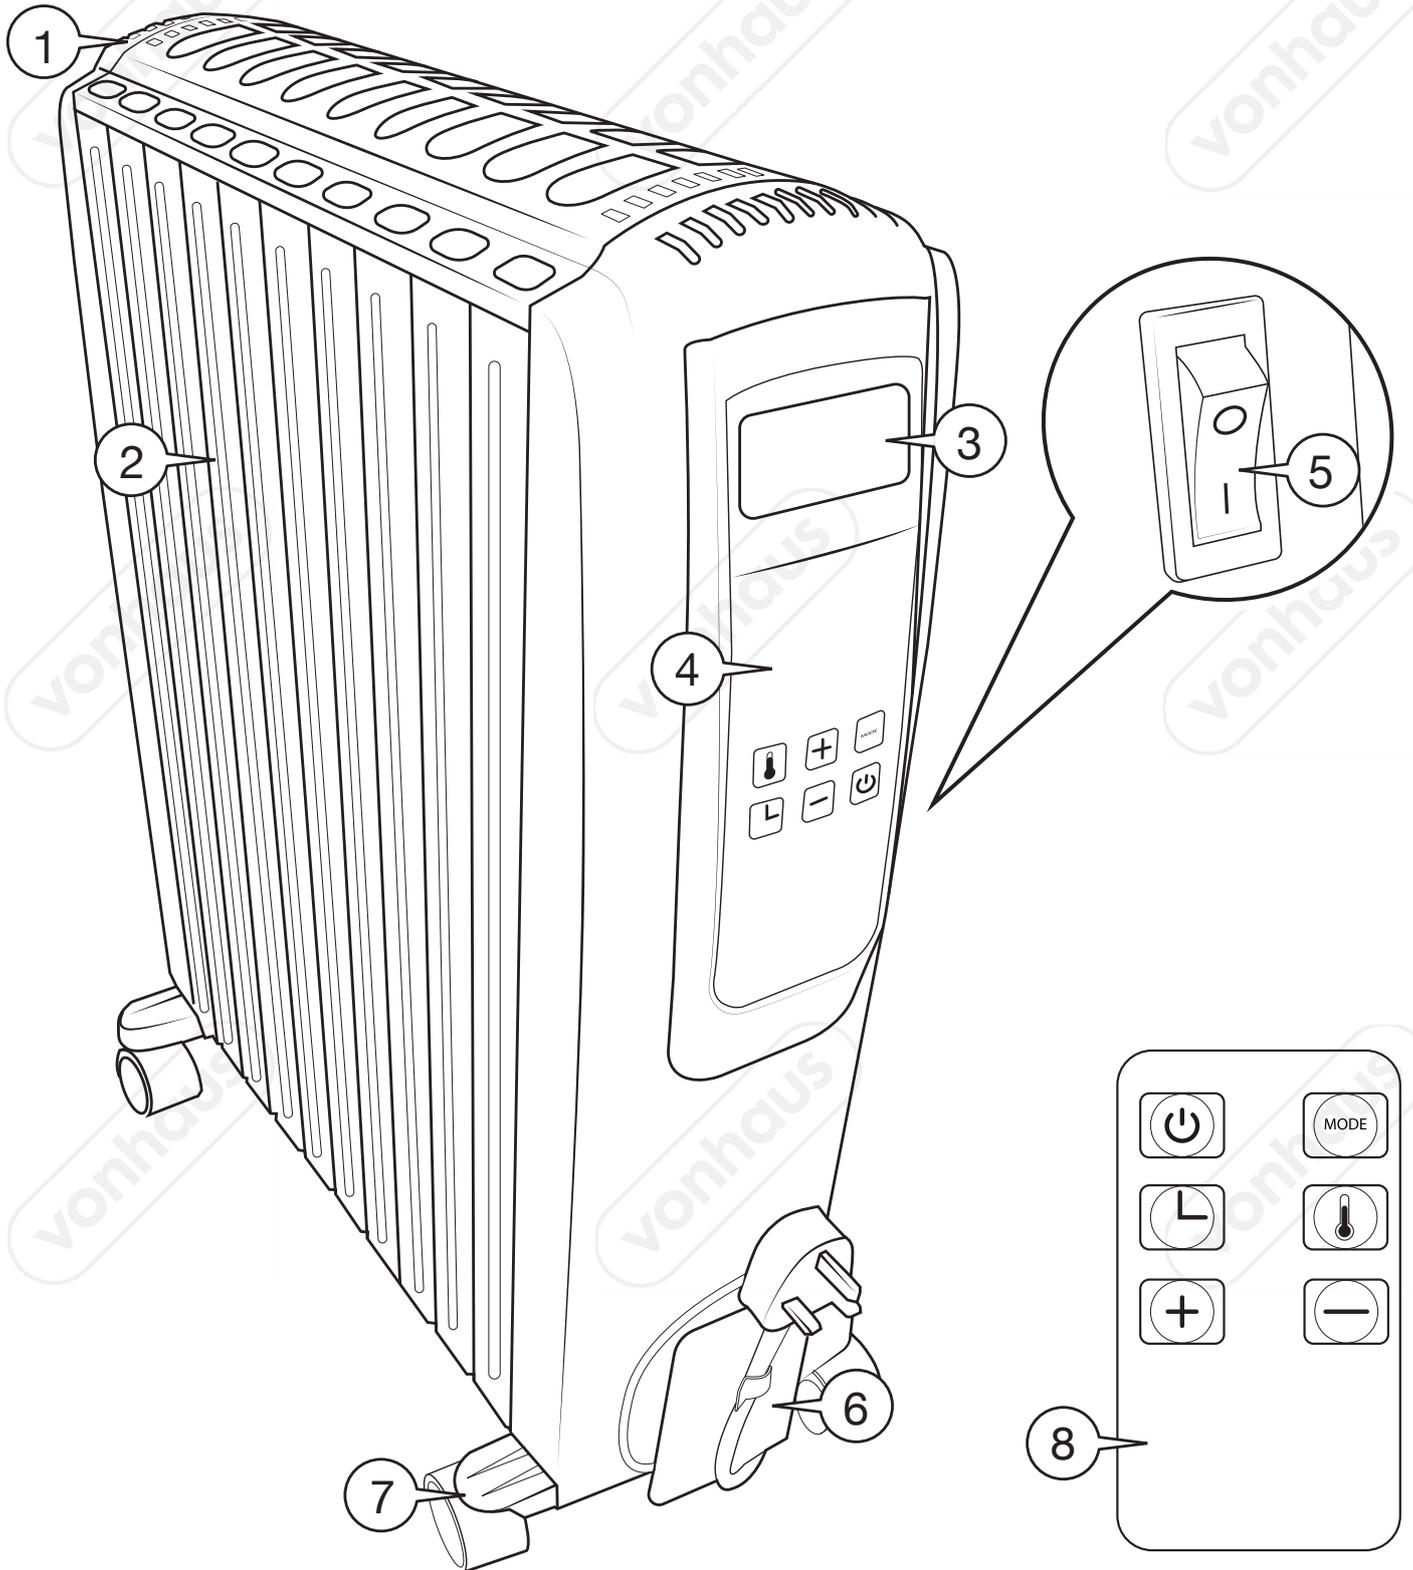


- 1 Rear Handle with remote storage
- 2 Heater Body
- 3. Front Handle
- 4. Control Panel
- 5. On/Off Power Switch
- 6. Cable Storage
- 7. Pull Out Wheels
- 8. Remote

ASSEMBLY


NOTE: Do not operate the heater without the wheels being pulled in to place.

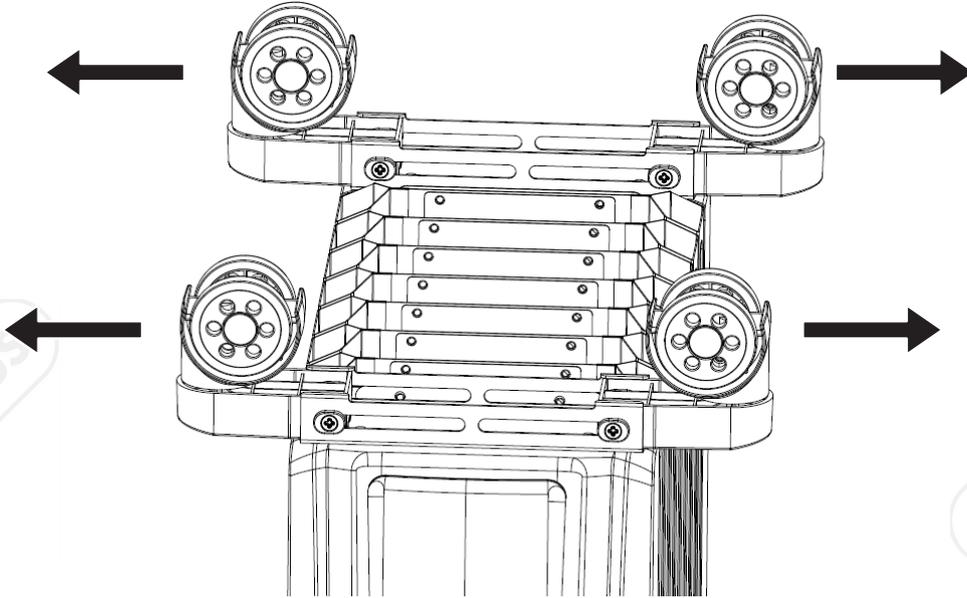


INSERTING THE BATTERY INTO THE REMOTE

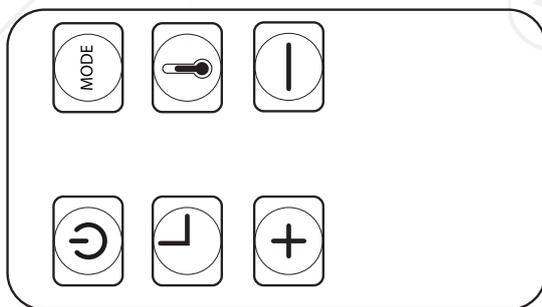

Battery Type 2025 3V

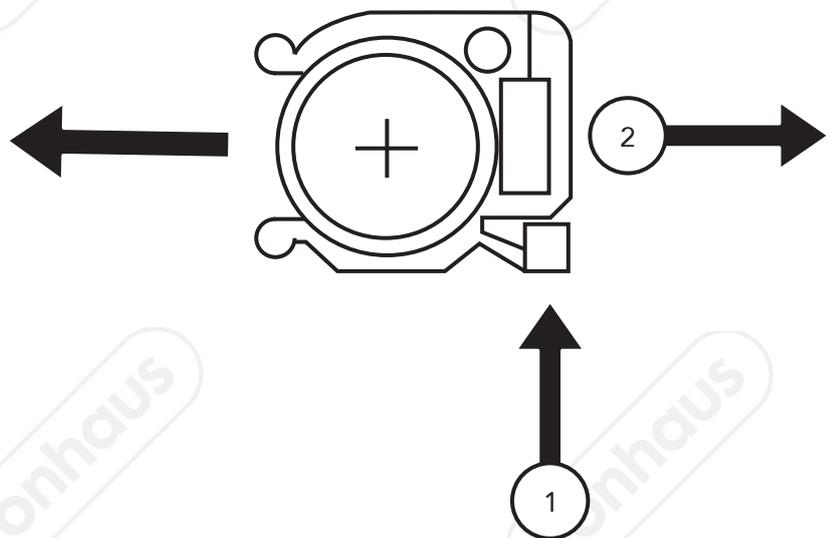

CONTROLS AND DISPLAY

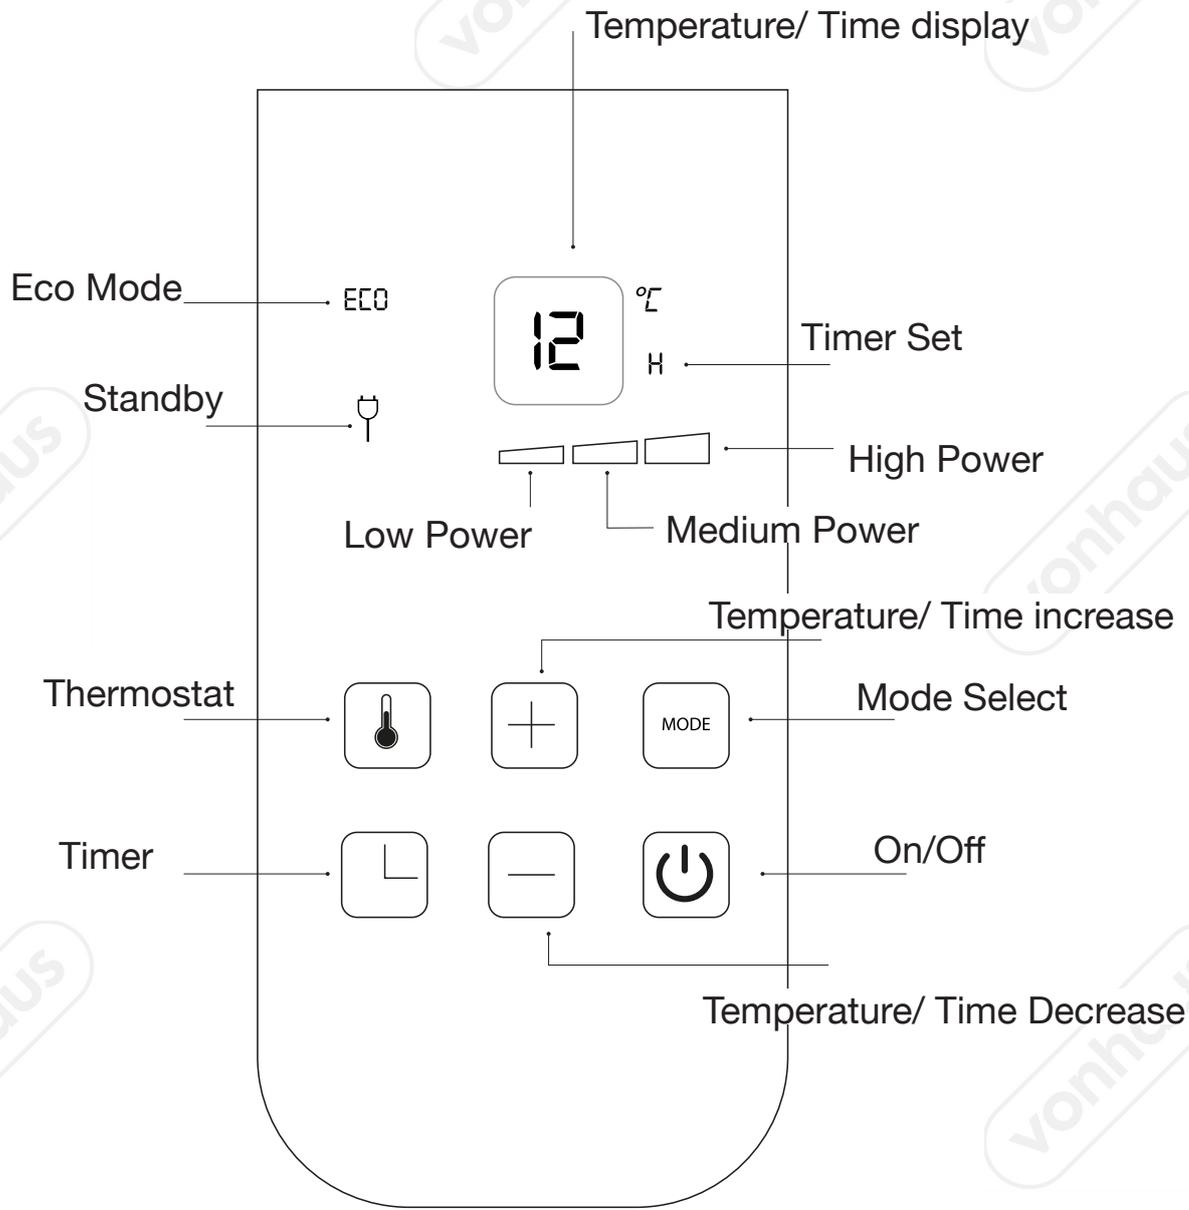

POWERING ON/OFF HEATER

To initially power on the heater press the on/off switch (5) located on the right hand side of the heater an audible “beep” will be heard and the heater will be in standby mode.

To select settings use either the remote or heater controls a beep will confirm each key press.

Press the On/Off button to power on the heater it will automatically go into Low Power Mode.

HEATING LEVEL AND ECO MODE SETTING

Press the Mode button to cycle through Low, Medium, High power and Eco Mode.

It is recommended that Low power is selected for extended use of the heater.

ECO MODE

Press the mode button to cycle to ECO mode.

Under Eco mode, the heater will adjust automatically, when the room temperature is below the selected temperature it will power on in High.

When the temperature reaches within 2° of the selected temperature it will adjust into Medium Power.

When the heater reaches within 1° of the selected temperature it will adjust into Low Power.

When the selected temperature matches the room temperature the heater will power off.

NOTE: if there is no set temperature the heater will automatically operate at 23°C in Eco Mode.

THERMOSTAT SETTING

The Thermostat is only adjustable in ECO mode between the settings of

10°C - 30°C.

Set the heater into ECO Mode, press the thermostat button and the display will blink

Press the “+” and “-” buttons to set the desired temperature, once selected the display will stop blinking and revert to showing the room temperature.

The heater will maintain the temperature in the room by switching on and off automatically.

TIMER : AUTO POWER ON

NOTE: The Timer increases by 0.5hr until it reaches 5hrs then it will increase by 1hr.

This function will power ON the heater after a certain period of time you can set this for up to 24hrs.

NOTE: The timer needs to be set whilst the heater is in standby mode.

1. Set the heater into standby mode
2. Press the Timer Button and the “H” will display and the hour will begin to blink “00”
3. Use the “+” and “-” buttons to set when the heater will power on you can set the timer between 1-24hrs.
4. Once the desired hour has been selected and the hour display stops blinking it will then show the count-down.
5. Press the mode button to select what heating level you desire the heater to start up in.

NOTE: If ECO mode is to be used set the heater in this mode and then adjust the desired temperature.

6. The heater will automatically turn on when the time runs out.

NOTE: When using the Auto Power off consideration should be take that the heater may operate whilst unattended, always follow safety instructions pro-

OPERATION

vided in this manual.

TIMER : AUTO POWER OFF

NOTE: The Timer increases by 0.5hr untill it reaches 5hrs then it will increase by 1hr.

This function will power OFF the heater after a certain period of time you can set this for up to 24hrs.

NOTE: The timer needs to be set whilst the heater is in powered on.

1. Press the Timer Button and the will display and the hour will begin to blink "00"
2. Use the "+" and "-" buttons to set when the heater will power OFF, you can set the timer between 1-24hrs.
4. Once the desired hour has been selected and the hour display stops blinking it will then show the count-down.
5. The heater will automatically turn OFF when the time runs out.

INFORMATION REQUIREMENTS FOR ELECTRIC LOCAL SPACE HEATERS

Model	2500449						
Item	Symbol	Value	Unit	Item	Unit		
Heat Output				Type of heat input for Electrical Storage Heaters only (select one)			
Nominal Heat Output	P_{nom}	2.5	kW	Manual heat charge control with integrated thermostat.	no		
Minimum Heat Output (indicative)	P_{min}	1.0	kW	Manual heat charge control with room and/or outdoor temperature feedback.	no		
Maximum Continuous Heat Output	P_{max}	2.5	kW	Electronic heat charge control with room and/or outdoor temperature feedback	no		
Auxiliary electricity consumption				Fan assisted heat output			
At nominal heat output	EL_{max}	N/A	kW	Type of heat output/room temperature control (select one)			
At minimum heat output	EL_{min}	N/A	kW	Single stage heat output and no room temperature control	no		
In standby mode	EL_{SB}	0.0015	kW	Two or more manual stages, no room temperature control	no		
				With mechanical thermostat room temperature control	no		
				With electronic room temperature control	no		
				Electronic room temperature control plus day timer	yes		
				Electronic room temperature control plus week timer	no		
				Other control options (multiple selections possible)			
				room temperature control with presence detection	no		
				room temperature control with open window detection	no		
with distance control option	no						
with adaptive start control	no						
with working time limitation	no						
with black bulb sensor	no						
Contact Details	DOMU Brands Ltd, 5th & 6th Floor, The Tower, Deva City Office Park, Salford, M3 7BF						



DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact **support@domu.co.uk**

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to **www.vonhaus.com/warranty**. Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at **support@domu.co.uk** VonHaus is a registered trademark of DOMU Brands Ltd. Made in China for DOMU Brands. M24 2RW.