

2500494



Please read all instructions carefully before use and retain for future reference.



CAUTION Do not immerse in water.



CAUTION hot surfaces



Do not cover.



PRODUCT DISPOSAL INFORMATION For electrical products sold within the European Community, at the end of the electrical product's useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Contact your local authority for details of collection schemes in your area.

In all circumstances:
Do not dispose of in domestic waste.
Do not incinerate.
Do not abandon in the environment.
Do not dispose of WEEE as unsorted municipal waste.

EN

Please read all instructions carefully before use and retain for future reference.

INTENDED USE Only operate the appliance for its intended purpose and within the parameters specified in this manual.

This appliance is for domestic use only. Do not use outdoors or on wet surfaces.

This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

GENERAL SAFETY Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance.

If the appliance is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services. Do not use the appliance if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached as instructed by this instruction manual before use.

CABLES AND PLUGS Check to ensure your electricity supply matches that shown on the rating plate. This product should only be used as rated. Preferably, the socket outlet should be protected by a Residual Current Device RCD (UK/EU) Ground Fault Indicator (US).

Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorised service agent in order to avoid a hazard. The use of an extension cable is not recommended.

Do not handle the plug or appliance with wet hands. Keep the cable away from heated surfaces.

Do not let the cable hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets.

Do not pull the cable around sharp edges or corners.

Do not leave unattended when plugged in. Unplug from outlet when not in use.

Turn off all controls before unplugging.

Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.

Always unplug before performing user maintenance, connecting or disconnecting attachments, or changing accessories.

Ensure the cable is stored safely to prevent hazards.

RISK OF PERSONAL INJURY Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides. Do not insert any objects into openings or cover the appliance.

Do not place any cardboard, plastics or paper inside or on the appliance unless stated in the instructions.

Do not use the appliance near any combustible

surfaces. Only use suitable cookware where applicable.

Do not use outdoors or near heat sources.

Take care not to touch any surfaces that may get hot

when in use. Take care not to touch any surfaces that

may remain hot for a period of time after use.

Never operate the appliance when empty.

Do not overload/overfill the appliance.

When using for the first time your appliance may give

off a 'new' smell or vapour. This will dissipate after a few

uses. Do not lift or move the appliance whilst in use.

Do not operate continuously for periods longer than

those marked on the product or indicated in the

instructions.

Ensure the appliance is switched off and unplugged

before changing accessories or cleaning.

Use only as described in this manual and with DOMU

Brands recommended attachments only.

TECHNICAL SPECIFICATION

 
 
Rated Voltage 220V-240V

Rated Power 60W


Rated Frequency 50Hz

COMPONENTS


- 1. Control Panel
- 2. LCD Display
- 3. Air Outlet
- 4. Base
- 5. Remote Control
- 6. Screws x8 (not shown)

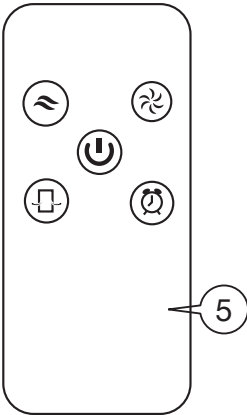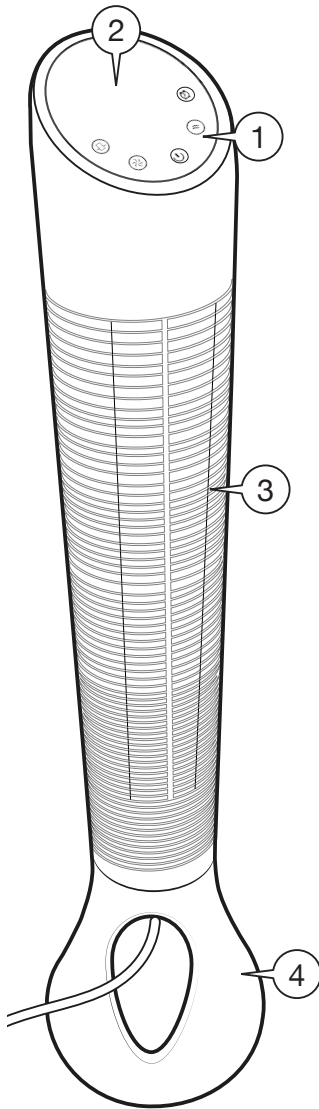


ASSEMBLY

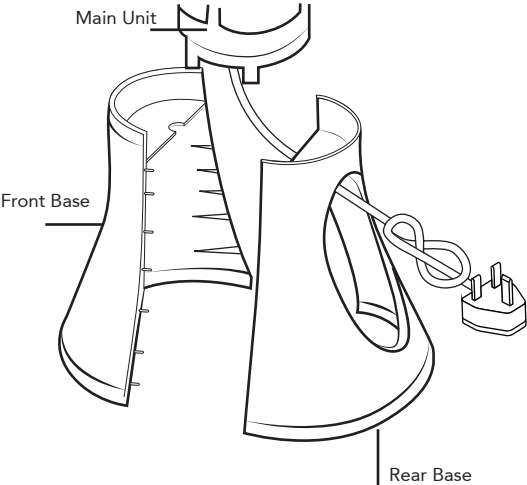 

 Place the power cord into the center hole of the Front and Rear base, and then assemble the Front Base to the Rear Base.


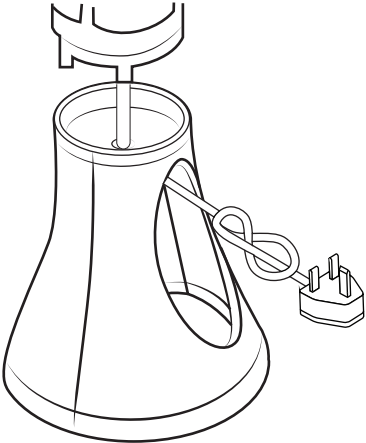


 Place the power cord into the center hole of the Front and Rear base, and then assemble the Front Base to the Rear Base.

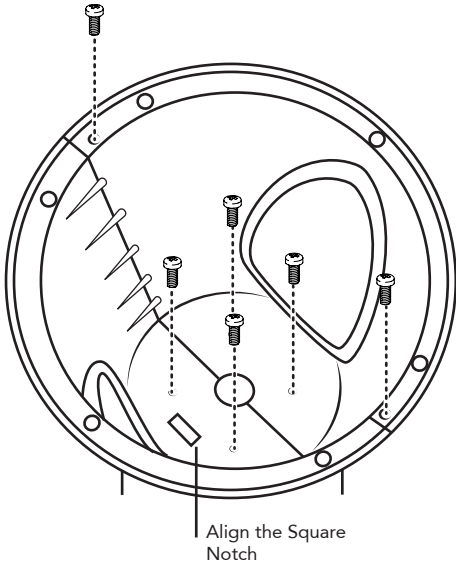

Align the Square Hole up to the Square notch on the Main Unit, and insert the screws.

  Ensure screws are firmly tightened.

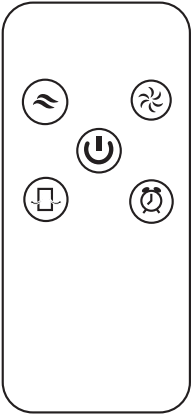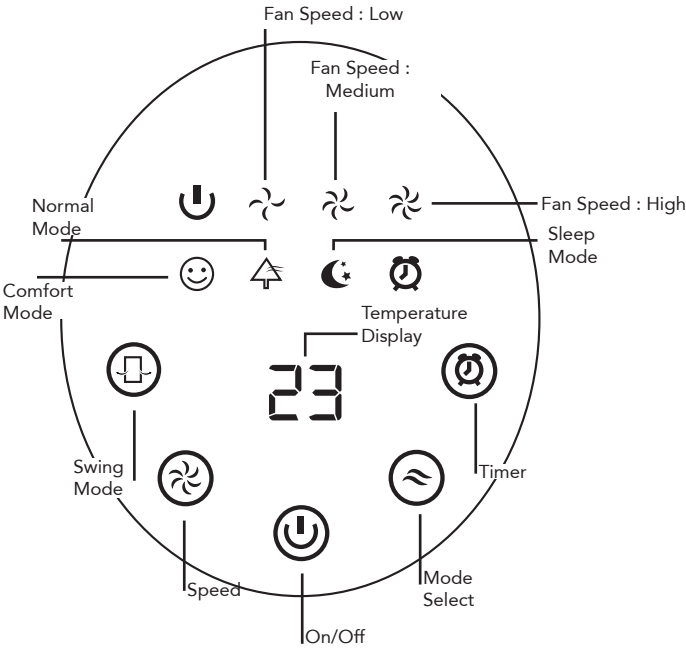


OPERATION




Press once to activate the Fan, It will default into Medium Mode / Low Speed .
The room Temperature will be displayed.



Comfort , Normal  or Sleep  modes can be selected by pressing this button. The relevant icons will be displayed on screen when selected.

When used in Normal Mode , the fan speed is randomly adjusted, giving the feeling of a natural breeze.

When set to Sleep Mode the fan speed decreases intermittently from high to medium, then medium to low. When used with the timer, will ultimately switch the unit off.

Sleep Mode:  - This mode has three types of air cycles: strong, medium and soft breeze ~ use the button to set fan speed.

1. At high setting, strong wind will operate at first then will step down to medium wind, to soft wind, to a halt and will return to strong wind. This cycle will carry on continuously or until the timer switches off.
2. At medium setting, medium wind will operate at first then will step down to soft wind, to a halt and will return to medium wind; this cycle will continue.
3. At low setting, soft wind will operate at first then the fan will stop and then return to soft wind; this cycle will continue indefinitely until manually powered off or the timer duration is reached.



• **Speed Selection**, cycles through 3 levels,



Low



Med



High



 
This button allows you to enter the 'timer mode'. Press to increase the number of hours (1 to 8) you wish the Fan to remain operational.



Turns Oscillation On / Off

REPLACING THE BATTERY

To remove the battery compartment, squeeze the small black tab and pull.
Insert 1 x CR2025 (3V) battery into the small crevice as illustrated.

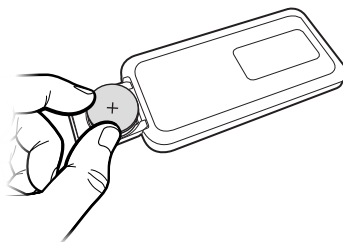



EN

DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact **support@domu.co.uk**

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to **www.vonhaus.com/warranty**.

Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance.
Should you require further assistance with your
purchase, you can contact us at
support@domu.co.uk

VonHaus is a registered trademark of DOMU Brands Ltd.
Made in China for DOMU Brands. M24 2RW.