2500514.1



Please read all instructions carefully before use and retain for future reference.



Do not iron



Do not tumble dry.



Do not wring dry.



Flammable Materials



110kg/242lb

Max Weight

IMPORTANT SAFETY INSTRUCTIONS.

WARNING! When using this product, important safety rules must be followed. For your own safety, and for the safety of others, please read these instructions carefully.

WARNING! This Hammock is for outdoor use only. **DO NOT** use indoors.

WARNING! This Chair is not designed or intended for use by children. Children should be supervised at all times as risk of entanglement and choking is present.

IMPORTANT SAFETY INFORMATION FOR ASSEMBLY.

CAUTION: The assembly pack contains small parts which pose a choking hazard to children and animals. Keep children and pets clear at all times during assembly.

Locate the Hammock in a suitable area where it will not create an obstruction.

Set the Hammock up within a few feet from the ground.

Always choose a strong, secure anchor point. Use only with secure fixings suited for this particular purpose

Ensure the Hammock is properly attached to a firm structure using appropriate connecting equipment before use.

Keep well away from sources of heat (such as fire), damp, or moisture.

DO NOT attach to awnings, parasols or gazebos.

RISK OF PERSONAL INJURY. This Hammock is not suitable for more than 1 person at any time.

CAUTION! The supporting ropes pose a risk of strangulation is the Hammock is misused.

Do not use the Hammock with more than the recommended safe capacity, or if any parts appear to be worn or damaged.

Keep away from sharp objects, jewellery or clothing.

Take care with anything that will catch on the strings such as buttons or studs.

This product is not a swing. Children must be supervised at all times to ensure they do not play with the Hammock.

Do not jump into, or swing from or within, the Hammock.

Never spin, twist or rotate the Hammock when in use.

STORAGE & MAINTENANCE.

Hand Wash only using warm water, a sponge and some mild fabric detergent.

Always hang your Hammock out to dry.

Store in a cool, dry place when not in use.

Always keep your Hammock indoors when not in use.

CAUTION: Never store your Hammock whilst damp.

Do not leave the Hammock outdoors in the rain, or expose to direct sunlight. This will cause the fabric and colour to deteriorate, reducing the lifespan of the Hammock.

Please check your Hammock safety capacity each and every time prior to using.









DISPOSAL INFORMATION Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE If you are having difficulty using this product and require support, please contact support@domu.co.uk

WARRANTY To register your product and find out if you qualify for a free extended warranty please go to domubrands.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date. The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty. Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights. No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT All material in this instruction manual are copyrighted by DOMU Brands. Any unauthorised use may violate worldwide copyright, trademark, and other laws.

THANK YOU

Thank you for purchasing your product/appliance. Should you require further assistance with your purchase, you can contact us at support@domu.co.uk

Made in China for DOMU Brands. M24 2RW.