


MESH GARDEN CART

2515292 - Instruction Manual

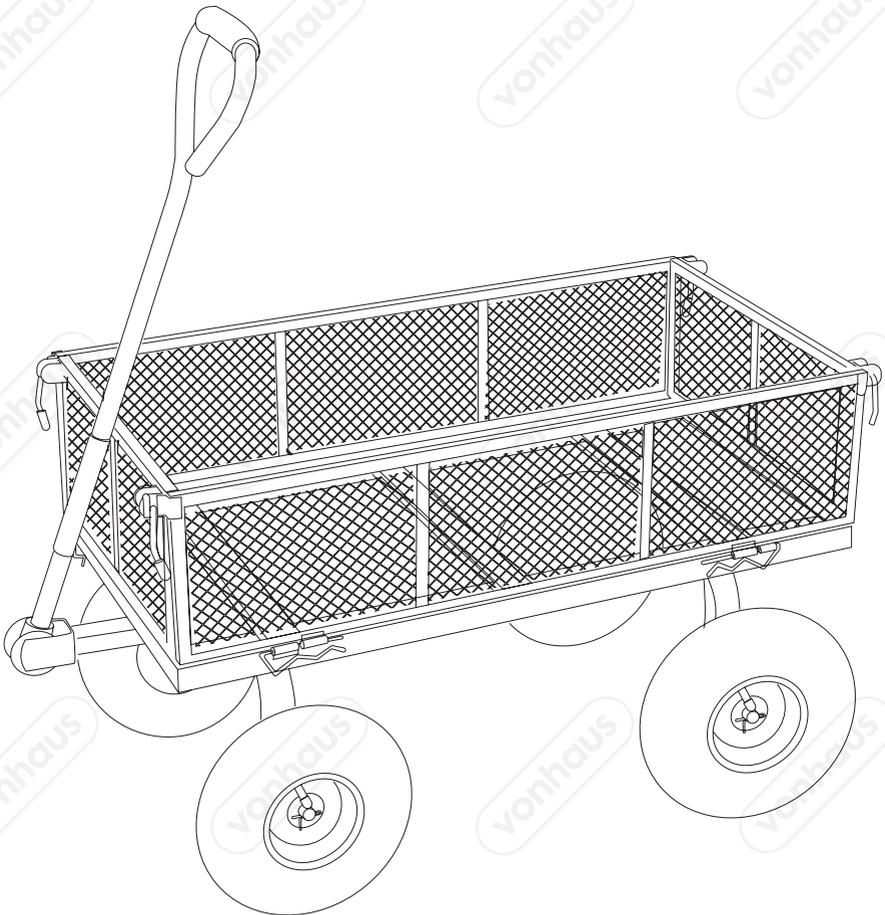

CONTENTS

Safety Instructions & Tools Required

1

Components

2

Assembly

3

Assembly

4

Assembly

5

Warranty

6

! WARNING !

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in serious injury.

CAUTION: Do not allow persons to operate or assemble the Mesh Garden Cart until they have read this manual and have developed a thorough understanding of how it works.

The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

ASSEMBLY & BEFORE USE.

CAUTION: The assembly pack contains small parts which pose a choking hazard to small children and animals. Keep children and pets away from the assembly area at all times and account for all parts once assembled.

Ensure all parts are present before commencing assembly.

Ensure the Mesh Garden Cart is correctly assembled before attempting to load or transport any load.

Before first use, ensure you check that the tyre pressure is at 30 PSI (maximum).

CAUTION: Do not inflate the tyres to more than 30 PSI. Do not use the Mesh Garden Cart on surfaces that can cause damage to the pneumatic tyres, or transport objects that may damage the tires.

Always check for damaged or worn out parts before using the Mesh Garden Cart. Do not use the Mesh Garden Cart if any parts are worn or broken. Seek suitable repair or replacement from a qualified person.

LOADING THE MESH GARDEN CART.

Do not drop or throw items into the Mesh Garden Cart.

Heavy items should be placed onto the bottom of the Mesh Garden Cart.

Distribute load over the surface of the Mesh Garden Cart. Do not load items on the top edges of the Mesh Garden Cart.

Distribute weight evenly across the Mesh Garden Cart.

Do not overfill the Mesh Garden Cart. Top heavy items should not be transported using the Mesh Garden Cart. Risk of accident or injury is present if misused.

Do not exceed loading capacity.

Maximum load capacity: 500kg.

IMPORTANT: Load capacity is greater than the maximum weight for dumping. Weights are based on an evenly distributed load.

IMPORTANT SAFETY INFORMATION FOR USE.

Take care during assembly, use and maintenance. Various crush and shear points are present in the turning axle and around the handles. Wear suitable safety equipment including footwear and gloves or any additional equipment recommended for the task at hand.

This product is not a toy. Do not allow children, animals or passengers to climb onto or ride the Mesh Garden Cart.

Do not use the Mesh Garden Cart to transport flammable or abrasive chemicals.

Do not modify the Mesh Garden Cart in any way. Unauthorised modification may impair the function and/or safety of the Mesh Garden Cart and may affect the life of the equipment.

STORAGE & CARE.

When the Mesh Garden Cart is not in use, store it in a secure place away from adverse weather conditions and out of the reach of children.

Inspect the Mesh Garden Cart to ensure it is in good working condition prior to storage and before re-use.

TOOLS REQUIRED *NOT SUPPLIED




Adjustable wrench




Two person assembly advised

COMPONENTS

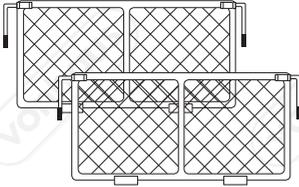


A End Sections (x2)

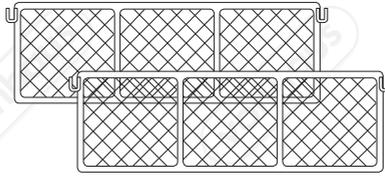


B Side Sections (x2)




C Pneumatic Wheels (x4)

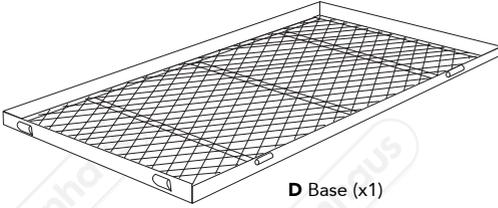


D Base (x1)

 


E Handle (x1)

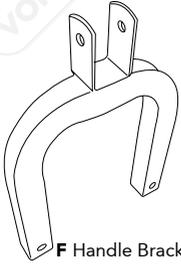

F Handle Bracket (x1)

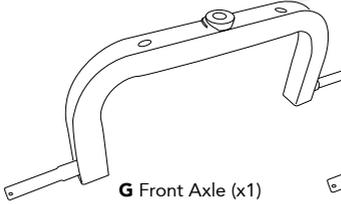


G Front Axle (x1)

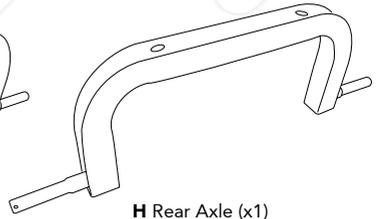

H Rear Axle (x1)



 I Hinge with Washer/Bolt/Nut (x1)




J Bolt/Washer/Nut (x2)



K Large Nylon Nut (x1)



L Small Nylon Nut (x2)

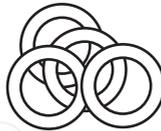


M Large Washer (x4)




N Small Washer (x2)



 O R-Pins
(x8)




P Split Pin (x4)

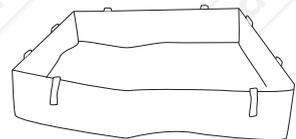

Heavy Duty Plastic Liner


ASSEMBLY

STEP 1: Fix the Handle Bracket (F) to the Front Axle (G) using the two (J) Bolt/Washer/Nuts.

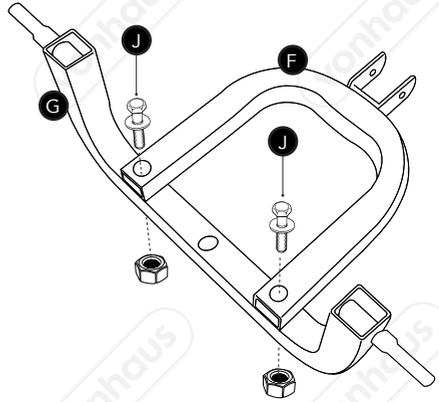

STEP 2: Take the Base (D) and turn upside down so that the protruding bolts are facing upwards.


Place both Axles (G/H) over the bolts, followed by the Washers (N/M) and secure into place using both the Large/Small Nylon Nuts (K/L) as shown.

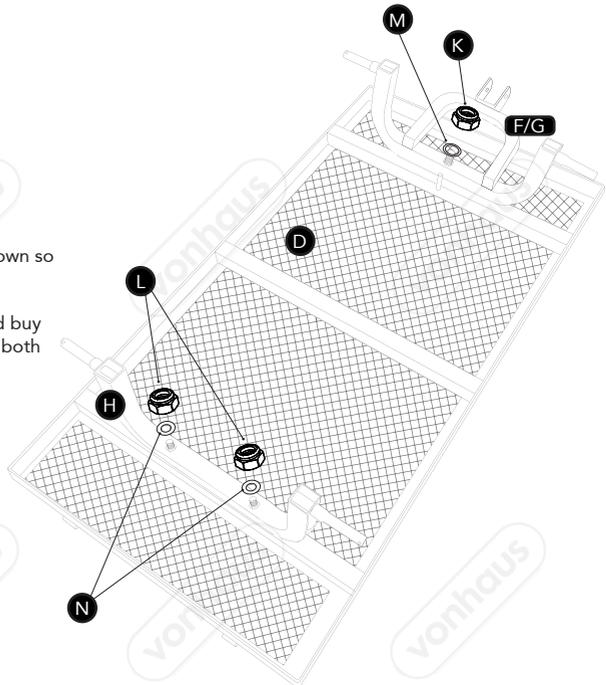

ASSEMBLY


STEP 3: Attach the 4 Pneumatic Wheels (C) to each end of the assembled base followed by a Large Washer (M)

Secure into place by threading a Split Pin (P) through each of the holes and bending to secure.

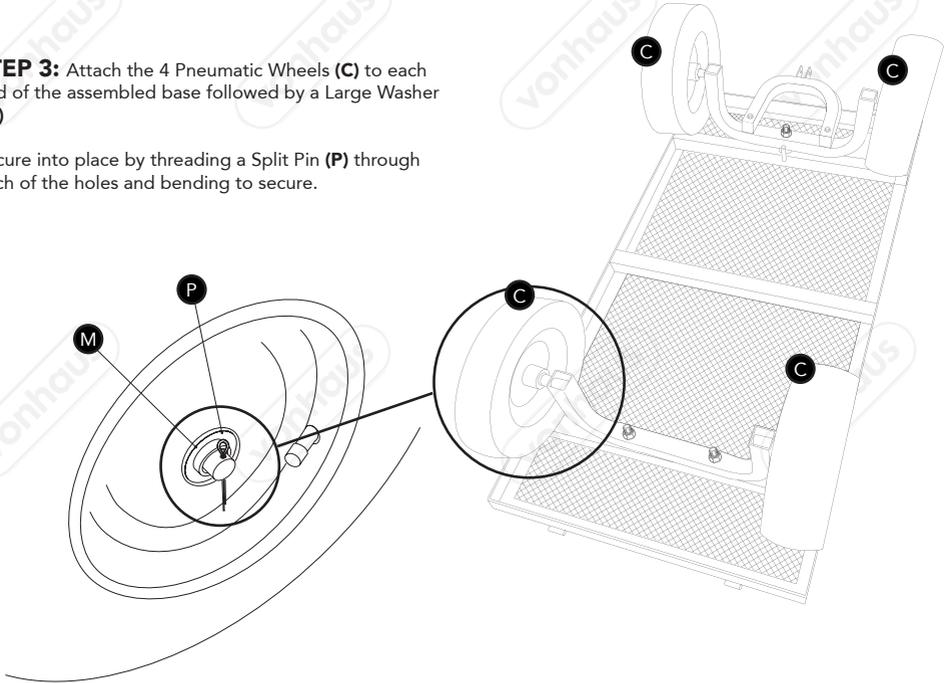


STEP 4: Remove the Bolt/Washer/Nut from the Hinge (I) insert the Handle (E) and align up the holes.

Take the Handle (E) and Hinge (I), align to the holes on the Handle Bracket (F) and thread through the Bolt/Washer and secure into place using the Nut (L).

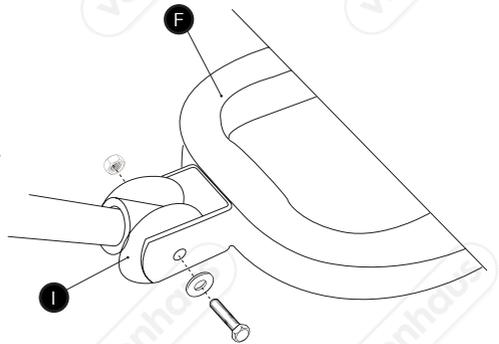

ASSEMBLY

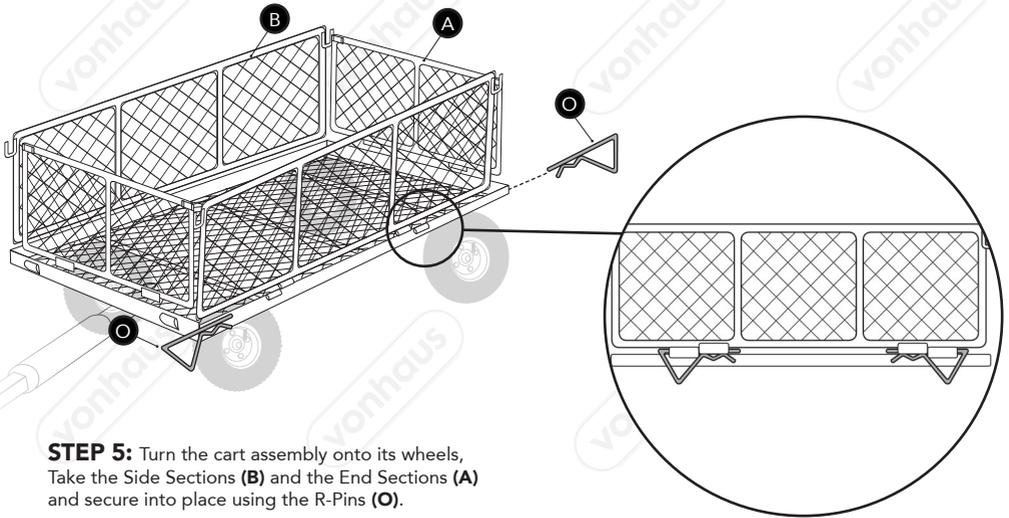

STEP 5: Turn the cart assembly onto its wheels, Take the Side Sections (**B**) and the End Sections (**A**) and secure into place using the R-Pins (**O**).

NOTE: Ensure the brackets are on the outside of the cart for the Sides and Ends to sit flush.

NOTE: Lift the Locking Handles to align with the slots on the Side Panels. Lower the Locking Handles to secure.

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

WARRANTY

To register your product and find out if you qualify for a free extended warranty please go to

www.Vonhaus.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the Warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

USER NOTES

Vonhaus

VonHaus.com

Thank you for purchasing the Mesh Garden Cart.

VonHaus® is a registered trademark of DOMU Brands Ltd
Made in China for DOMU Brands Ltd M24 2RW

VonHaus