

# 3500382

---

Depress on both **Brush Roller Buttons (B)** to remove the Brush and replace with this spare part.

We recommend before replacing the replacement brush roller, to remove any grass and mud residue. Use a clean cloth to remove dirt and grease.

**DO NOT** use any water on any part of the main machine. Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Always ensure that ventilation openings are kept clear of debris.

